TOSHIBA

FILE NO. 140-200105

SERVICE MANUAL

COLOR TELEVISION

27A41C

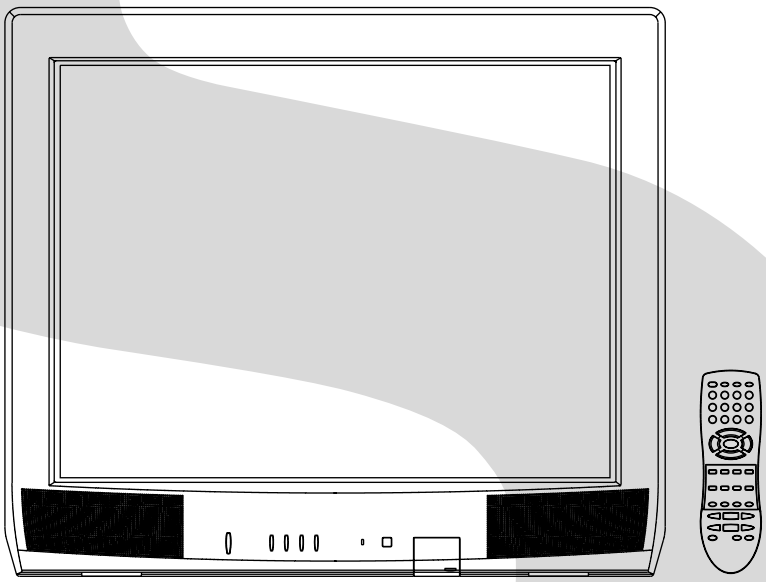

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.
When replacing an IC's or transistors, use only specified silicon grease (YG6260M).
Remove all old silicon before applying new silicon.

GENERAL SPECIFICATIONS

G-1	**TV System**	CRT		CRT Size / Visual Size	27 inch / 676mmV
				CRT Type	Normal
				Deflection	102 degree
				Magnetic Field BV/BH	+0.45G/0.18G
		Color System			NTSC
		Speaker			2Speaker
				Position	Front
				Size	2.0 x 3.5 Inch
				Impedance	8 ohm
		Sound Output		MAX	2.5 + 2.5 W
				10%(Typical)	2.0 + 2.0 W
		NTSC3.58+4.43 /PAL60Hz			No
G-2	**Tuning System**	Broadcasting System			US System M
		Tuner and Receive CH		System	1Tuner
				Destination	Ohers
				Tuning System	F-Synth
				Input Impedance	VHF/UHF 75 ohm
				CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency		Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.50MHz
		Preset CH			No
		Stereo/Dual TV Sound			Yes
		Tuner Sound Muting			Yes
G-3	**Power**	Power Source		AC	120V AC 60Hz
				DC	-
		Power Consumption		at AC	120 W at AC 120 V 60 Hz
				Stand by (at AC)	4 W at AC 120 V 60 Hz
				Per Year	-- kWh/Year
		Protector		Power Fuse	Yes
G-4	**Regulation**			Safety	CSA
				Radiation	DOC
				X-Radiation	HWC
G-5	**Temperature**			Operation	+5oC ~ +40oC
				Storage	-20oC ~ +60oC
G-6	**Operating Humidity**				Less then 80% RH
G-7	**On Screen Display**	Menu			Yes
			Menu Type		Icon
			Picture		Yes
				Contrast	Yes
				Brightness	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
			Sound		Yes
				Bass	Yes
				Treble	Yes
				Balance	Yes
				BBE On/Off	No
				Stable Sound On/Off	Yes
			Set Up		Yes
				TV/CABLE(CATV)	Yes
				CH Program	Yes
				Add/Erase	Yes
			Option		Yes
				Language	Yes
				V-chip	No
				CH Label	Yes
				Favorite CH	Yes
				Color Stream DVD/DTV	Yes
			Control Level		Yes
				Volume	Yes
				Brightness	Yes
				Contrast	Yes
				Color	Yes
				Tint (NTSC Only)	Yes
				Sharpness	Yes
				Tuning	No
				Bass	Yes
				Treble	Yes
				Balance	Yes
				Back Light	No
			Stereo,Audio Output,SAP		Yes
			Video		Yes
			Color Stream		Yes
			Channel(TV/Cable)		Yes
			CH Label		Yes
			Sleep Timer		Yes
			Sound Mute		Yes
			P-in-P		No
			V-chip Rating		No

GENERAL SPECIFICATIONS

G-8	**OSD Language**	OSD Language Setting		English French Spanish English
G-9	**Clock and Timer**	Sleep Timer	Max Time	120 Min
			Step	10 Min
		On/Off Timer	Program(On Tim / Off Tim)	No
		Wake Up Timer		No
		Timer Back-up (at Power Off Mode)	more than	-- Min Sec
G-10	**Remote Control**	Unit		RC-DU
		Glow in Dark Remocon		Yes
		Format		Toshiba
		Custom Code		TV:40-BF h
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		42 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			100	Yes
			CH Up	Yes
			CH Down	Yes
			Volume Up	Yes
			Volume Down	Yes
			TV/Caption/Text	Yes
			CH1/CH2	Yes
			TV/Video(TV/AV)	Yes
			CH RTN/CH ENT(Quick View)	Yes
			Sleep	Yes
			RE Call(Call)	Yes
			Reset	Yes
			Menu/Enter	Yes
			Mute	Yes
			Exit	Yes
			MTS(Audio Select)	Yes
			Fav.Up	Yes
			Fav.Down	Yes
			Set +	No
			Set -	No
		P-in-P Keys	PIP	No
			Swap	No
			Locate	No
			Still	No
		2 Tuner	PIP CH Up	No
		P-in-P Only	PIP CH Down	No
		Multi Brand Keys	CH Up(VCR)	Yes
			CH Down(VCR)	Yes
			Pause/Still	Yes
			TV/VCR(VCR)	Yes
			Code	Yes
			FF	Yes
			Rew	Yes
			Rec	Yes
			Play	Yes
			Stop	Yes
			TV	Yes
			VCR	Yes
			Cable	Yes

GENERAL SPECIFICATIONS

G-11	**Features**	Auto Degauss		Yes
		Auto Shut Off		Yes
		Canal+		No
		CATV		Yes
		Anti-theft		No
		Rental		No
		Memory(Last CH)		Yes
		Memory(Last Volume)		Yes
		V-Chip		No
			Type	USA,Toshiba Type
		BBE		No
		Auto Search		No
		CH Allocation		No
		SAP		Yes
		Channel Lock		No
		Just Clock Function		No
		Game Position		No
		CH Label		Yes
		VM Circuit		No
		Full OSD		No
		Premiere		No
		Comb Filter		Yes 2 Lines
		Auto CH Memory		Yes
		Hotel Lock		No
		Closed Caption		Yes
		Stable Sound		Yes
		FBT Leak Test Protect		Yes
		Favorite CH		Yes
		1 Tuner P-in-P		No
		2 Tuner P-in-P		No
G-12	**Accessories**	Owner's Manual	Language	English/French
			W/ Warranty	No
		Remote Control Unit		Yes
		Rod Antenna		No
			Poles	
			Terminal	
		Loop Antenna		No
			Terminal	
		U/V Mixer		No
		DC Car Cord (Center+)		No
		Guarantee Card		No
		Warning Sheet		No
		Circuit Diagram		No
		Antenna Change Plug		No
		Service Station List		Yes
		Important Safety Instruction		Yes
		Dew/AHC Caution Sheet		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		Yes
			UM size x pcs	UM4 size x 2
			OEM Brand	No
		AC Cord		No
		AV Cord (2Pin-1Pin)		No
		Registration Card (NDL Card)		Yes
		ESP Card		No
		PTB Sheet		No
		300 ohm to 75 ohm Antenna Adapter		No
		Envelop		Yes

GENERAL SPECIFICATIONS

G-13	**Interface**	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
			Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator		Power	Yes
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input	RCA
				Audio Input	RCA x 2
				Other Terminal	No
			Rear	Video Input(Rear1)	RCA
				Video Input(Rear2)	RCA
				Audio Input(Rear1)	RCA x 2
				Audio Input(Rear2)	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2
				S- Input	Yes
				Euro Scart	No
				Color Stream	RCA x 3
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	**Set Size**			Approx. W x D x H (mm)	650 x 500.5 x 560
G-15	**Weight**			Net (Approx.)	35kg (77.1 lbs)
				Gross (Approx.)	38Kg (83.7 lbs)
G-16	**Carton**		Master Carton		No
				Content	---- Sets
				Material	-- /--
				Dimensions W x D x H(mm)	-- x -- x --
				Description of Origin	No
			Gift Box		Yes
				Material	Double/Brown
				Dimensions W x D x H(mm)	718 x 580 x 655
				Design	As per Buyer's
				Description of Origin	Yes
			Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	31
			Container Stuffing		192 Sets/40' container
G-17	**Cabinet Material**			Cabinet Front	PS 94V0 DECABROM
				Cabinet Rear	PS 94V0

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

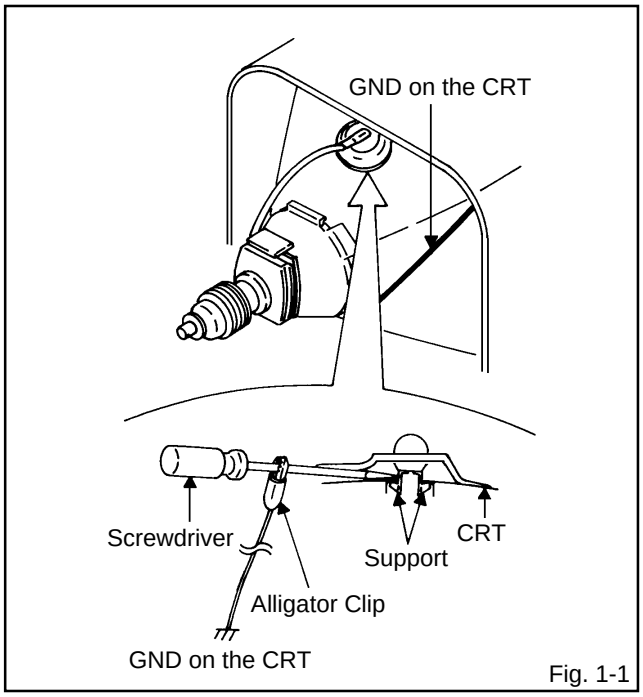

Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

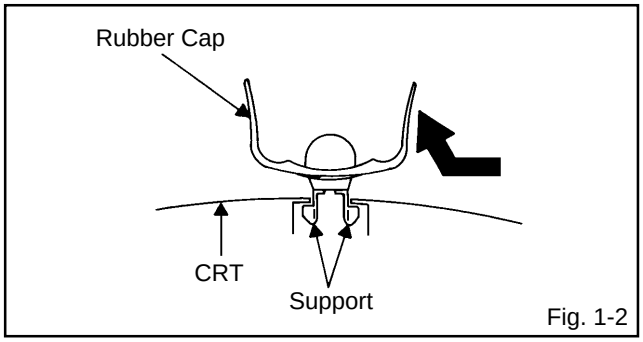

Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

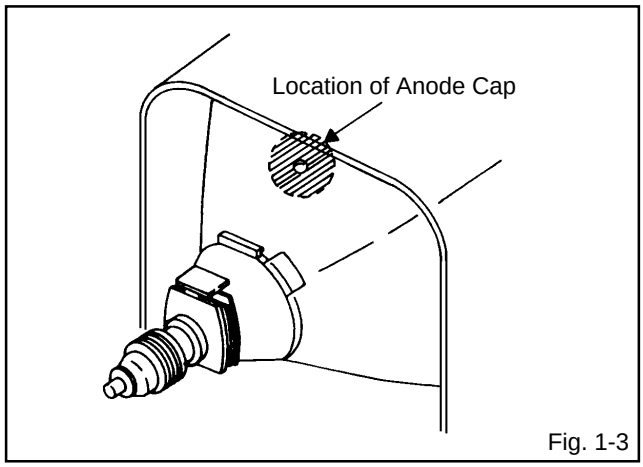

Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

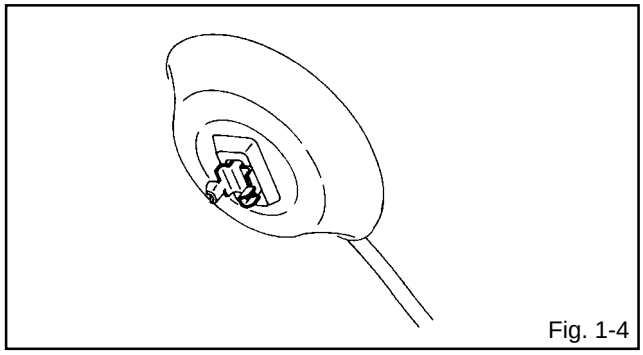
Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5**.

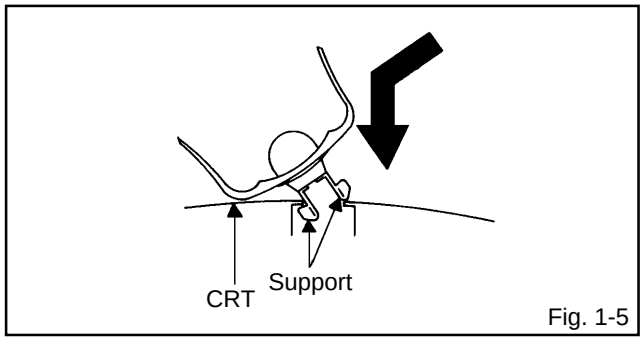

Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 2-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

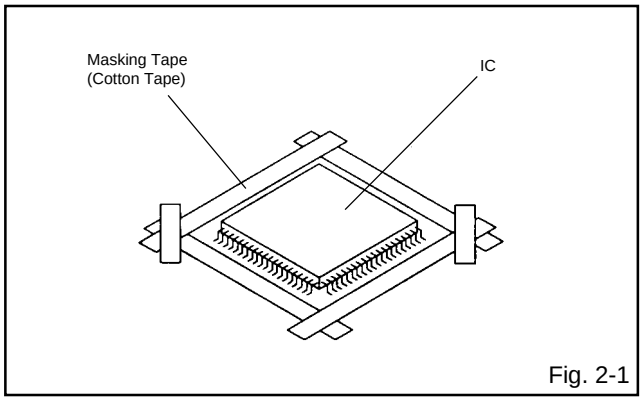

Fig. 2-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 2-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

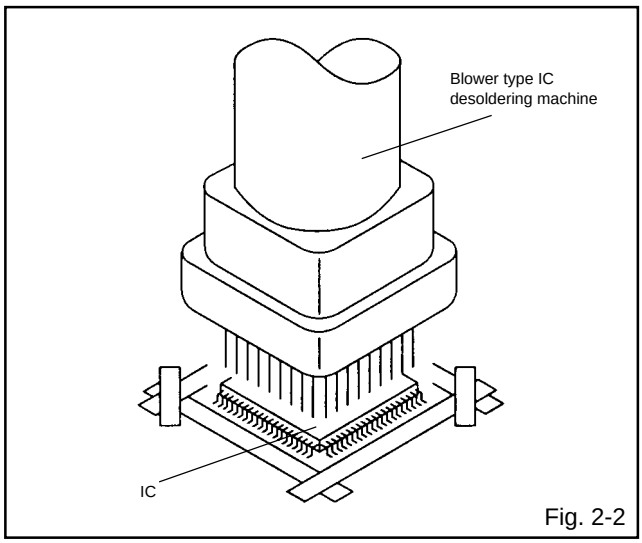

Fig. 2-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 2-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

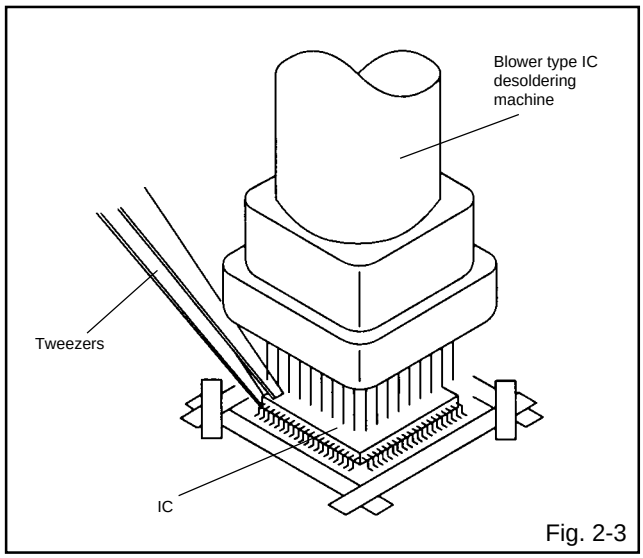

Fig. 2-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 2-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

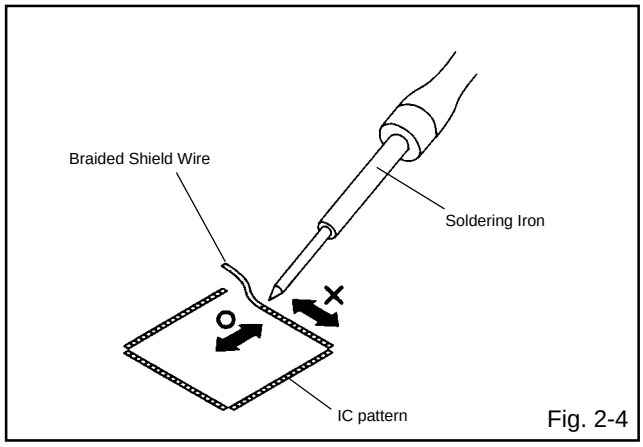

Fig. 2-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 2-5.)**

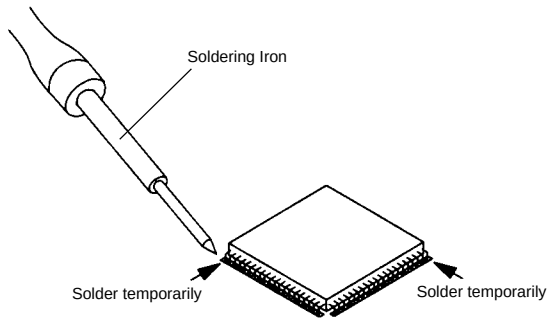

Fig. 2-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 2-6.)**

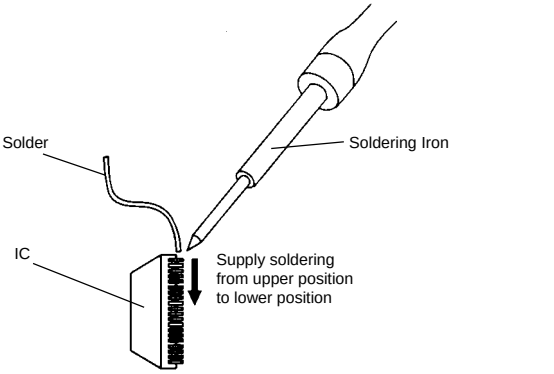

Fig. 2-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

   NOTE

   Do not absorb the solder to excess.

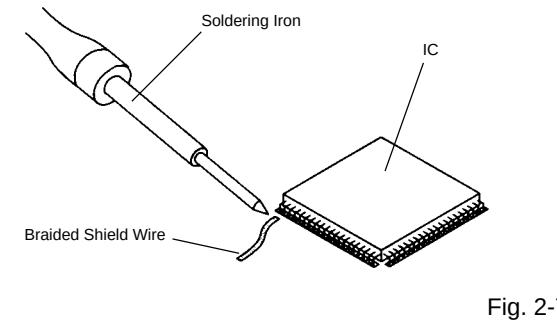

Fig. 2-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

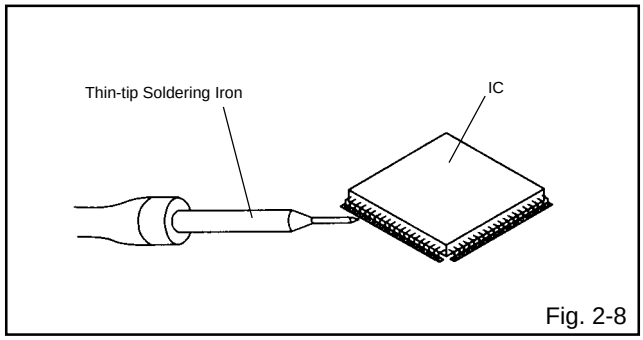

Fig. 2-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF USING HOURS". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "NOTE FOR THE REPLACING OF MEMORY IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF USING HOURS

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

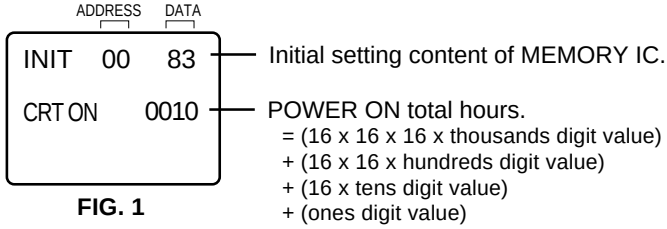
ADDRESS
DATA
INIT 00 83
CRT ON 0010
Initial setting content of MEMORY IC.
POWER ON total hours.
= (16 x 16 x 16 x thousands digit value)
+ (16 x 16 x hundreds digit value)
+ (16 x tens digit value)
+ (ones digit value)

FIG. 1

NOTE FOR THE REPLACING OF MEMORY IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	A9	C3	37	30	31	B3	27	17	BA	88	44	84	00	00	00	5F
10	0F	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
  Inferior silicon grease can damage IC's and transistors.
- When replacing IC's and transistors, use only specified silicon grease.
  Remove all old silicon before applying new silicon.

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. AC Voltmeter

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

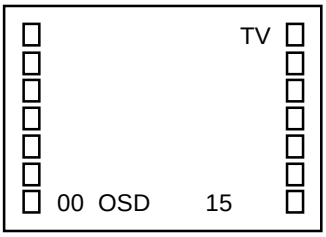

Fig. 1-1

2. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	17	SUBCONT
01	CUT OFF	18	UNI COL
02	RF. AGC	19	---
03	---	20	TINT
04	H. POSI	21	SHARP
05	V. POSI	22	RGB CONT
06	H. SIZE	23	PARABOLA
07	V. SIZE	24	TRAPEZIU
08	V. CENT	25	COR TOP
09	V. LIN	26	COR BTM
10	VS. CORR	27	V EHT
11	G. DRV	28	H EHT
12	B. DRV	29	FM. LVL
13	R. BIAS	30	LEVEL
14	G. BIAS	31	SEP1
15	B. BIAS	32	SEP2
16	BRI	33	T. STE

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Connect the digital voltmeter to **TP002**.
3. Adjust the **VR502** until the digital voltmeter is 135 ± 0.5V.

2-2: RF AGC

1. Receive the VHF LOW (61dB).
2. Connect the digital voltmeter between the **TP001** and the **GND**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "RF. AGC".
4. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.4V.

2-3: CUT OFF

1. Adjust the unit to the following settings.
   G. DRIVE=64, B. DRIVE=64, R. BIAS=15, G. BIAS=15, B. BIAS=15, BRIGHT=75, UNI COLOR=64
2. Place the set with Aging Test for more than 15 minutes.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
4. Adjust the **Screen Volume** until a dim raster is obtained.

2-4: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the white 100% signal from the Pattern Generator.
3. Using the adjustment control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "R. BIAS".
5. Using the VOL. UP/DOWN button on the remote control, adjust the R. BIAS.
6. Press the CH. UP/DOWN button on the remote control to select the "G. DRV", "B. DRV", "G. BIAS" or "B. BIAS".
7. Using the VOL. UP/DOWN button on the remote control, adjust the G. DRV, B. DRV, G. BIAS or B. BIAS.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.

2-5: FOCUS

1. Receive a 70dB monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-6: HORIZONTAL POSITION

1. Receive the center cross signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(04)** on the remote control to select "H. POSI".
4. Press the VOL. UP/DOWN button on the remote control until the right and left screen size of the vertical line becomes the same.

ELECTRICAL ADJUSTMENTS

2-7: VERTICAL LINEALITY

NOTE: Adjust after performing adjustments in section 2-6.

1. Receive the center cross signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(09)** on the remote control to select "V. LIN".
4. Press the VOL. UP/DOWN button on the remote control until the upside and downside screen size of the horizontal line becomes the same.

2-8: VERTICAL POSITION

NOTE: Adjust after performing adjustments in section 2-7.

1. Receive the center cross signal from the Pattern Generator.
2. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

2-9: VERTICAL SIZE

NOTE: Adjust after performing adjustments in section 2-8.

1. Receive the crosshatch signal from the Pattern Generator.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V. SIZE".
3. Press the VOL. UP/DOWN button on the remote control until the rectangle on the center of the screen becomes square.
4. Receive a broadcast and check if the picture is normal.

2-10: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-1)**

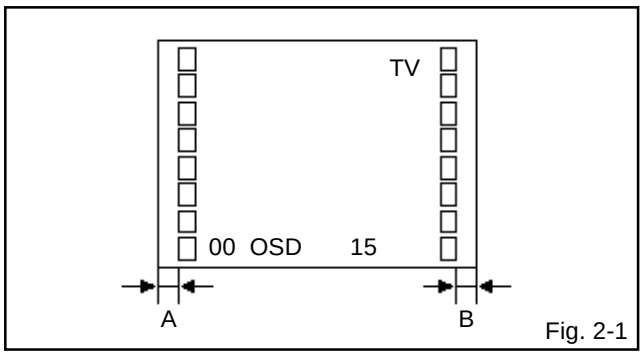

Fig. 2-1

2-11: LEVEL

1. Receive a 70dB monoscope pattern.
2. Connect the AC voltmeter to **TP901**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select "LEVEL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is 75 ± 2mV.

2-12: SEPARATION 1, 2

1. Receive the stereo signal (L=2KHz, R=400Hz).
2. Connect the AC voltmeter to **AUDIO OUT JACK** though stereo filter (L=400Hz, R=2KHz).
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(31)** on the remote control to select "SEP1".
4. Press the VOL. UP/DOWN button on the remote control until the output of L-CH and R-CH become minimum.
5. Press the CH UP button once the set to "SEP2" mode.
6. Press the VOL. UP/DOWN button on the remote control until the output of L-CH and R-CH become minimum.
7. Press the CH DOWN button once the set to "SEP1" mode.
8. Repeat step 4 to step 7 several times.
   The output difference of the between with Filter and without Filter should be more than 25db for both L and R.

2-13: BRIGHTNESS

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI".
2. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "92"
3. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~2.
4. Press the TV/VIDEO button on the remote control to set to the CS mode.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI".
6. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "90"

2-14: UNI-COLOR

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "UNI COL".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "54"
3. Press the TV/VIDEO button on the remote control to set to the AV mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "UNI COL".
5. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "58"
6. Press the TV/VIDEO button on the remote control to set to the CS mode.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "UNI COL".
8. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "60"

ELECTRICAL ADJUSTMENTS

2-15: SUB TINT/SUB COLOR

1. Receive the color bar pattern. (RF Input)
2. Connect the oscilloscope to **TP806**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(20)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the waveform becomes as shown in **Fig. 2-2**.
5. Connect the oscilloscope to **TP804**.
6. Press the CH DOWN button 3 times to set to "SUBCONT" mode.
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 105 ± 5% of the white level. **(Refer to Fig. 2-3)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~7.
10. Press the TV/VIDEO button on the remote control to set to the CS mode.
11. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(20)** on the remote control to select "TINT".
12. Press the VOL. UP/DOWN button on the remote control to increase the step numbers by 6 steps to the AV.
13. Press the CH DOWN button 3 times to set to "SUBCONT" mode.
14. Press the VOL. UP/DOWN button on the remote control to set the same step number as the AV.

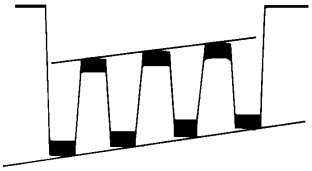

Fig. 2-2

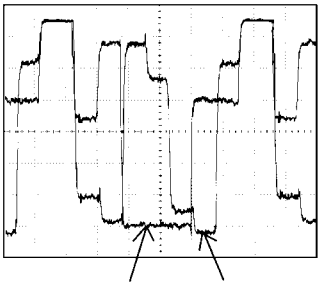

Fig. 2-3

2-16: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	CS
05	V. POSI	00	---	---
06	H. SIZE	00	---	---
08	V. CENT	35	---	---
10	VS. CORR	12	---	---
21	SHARP	30	35	35
22	RGB CONT	25	---	---
23	PARABOLA	00	---	---
24	TRAPEZIU	00	---	---
25	COR TOP	00	---	---
26	COR BTM	00	---	---
27	V EHT	00	---	---
28	H EHT	00	---	---
29	FM. LVL	01	---	---

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

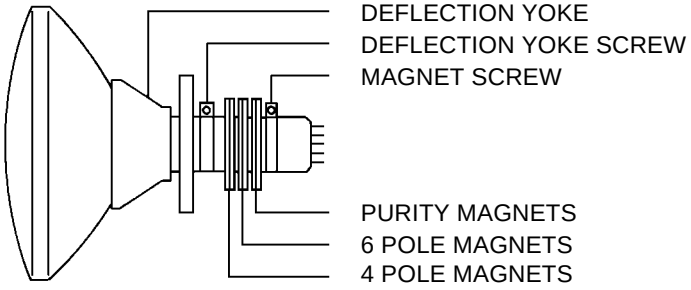

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

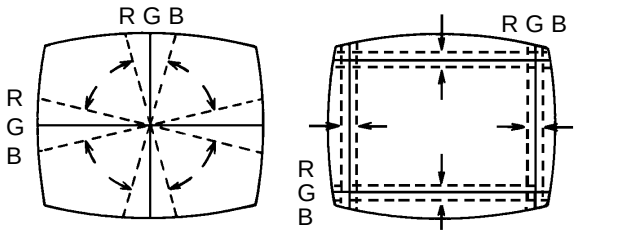

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

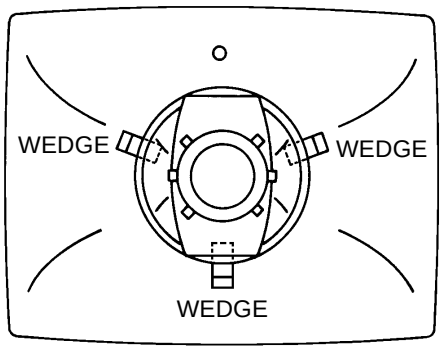

WEDGE POSITION

Fig. 3-2-b

MAJOR COMPONENTS LOCATION GUIDE

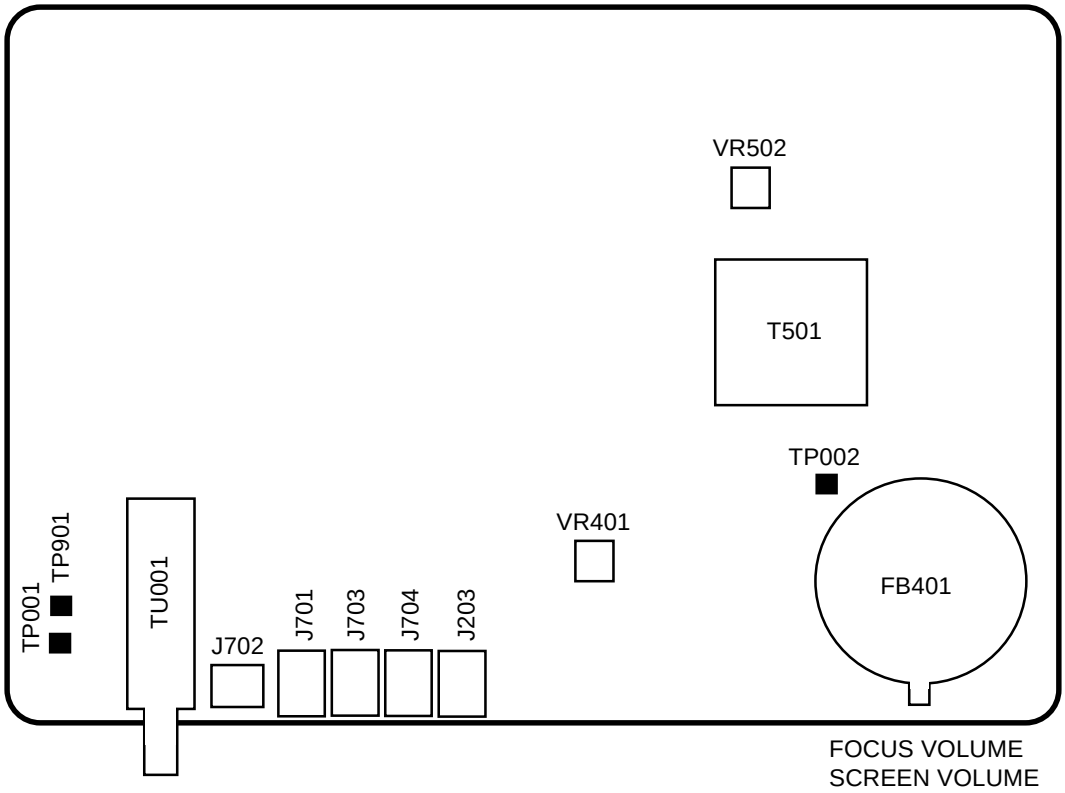

MAIN PCB

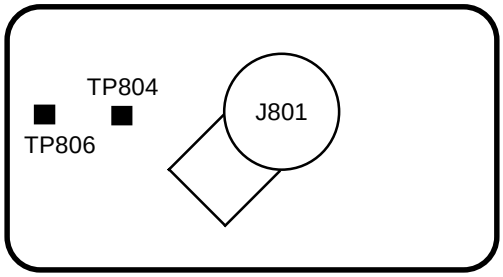

CRT PCB

TV BLOCK DIAGRAM

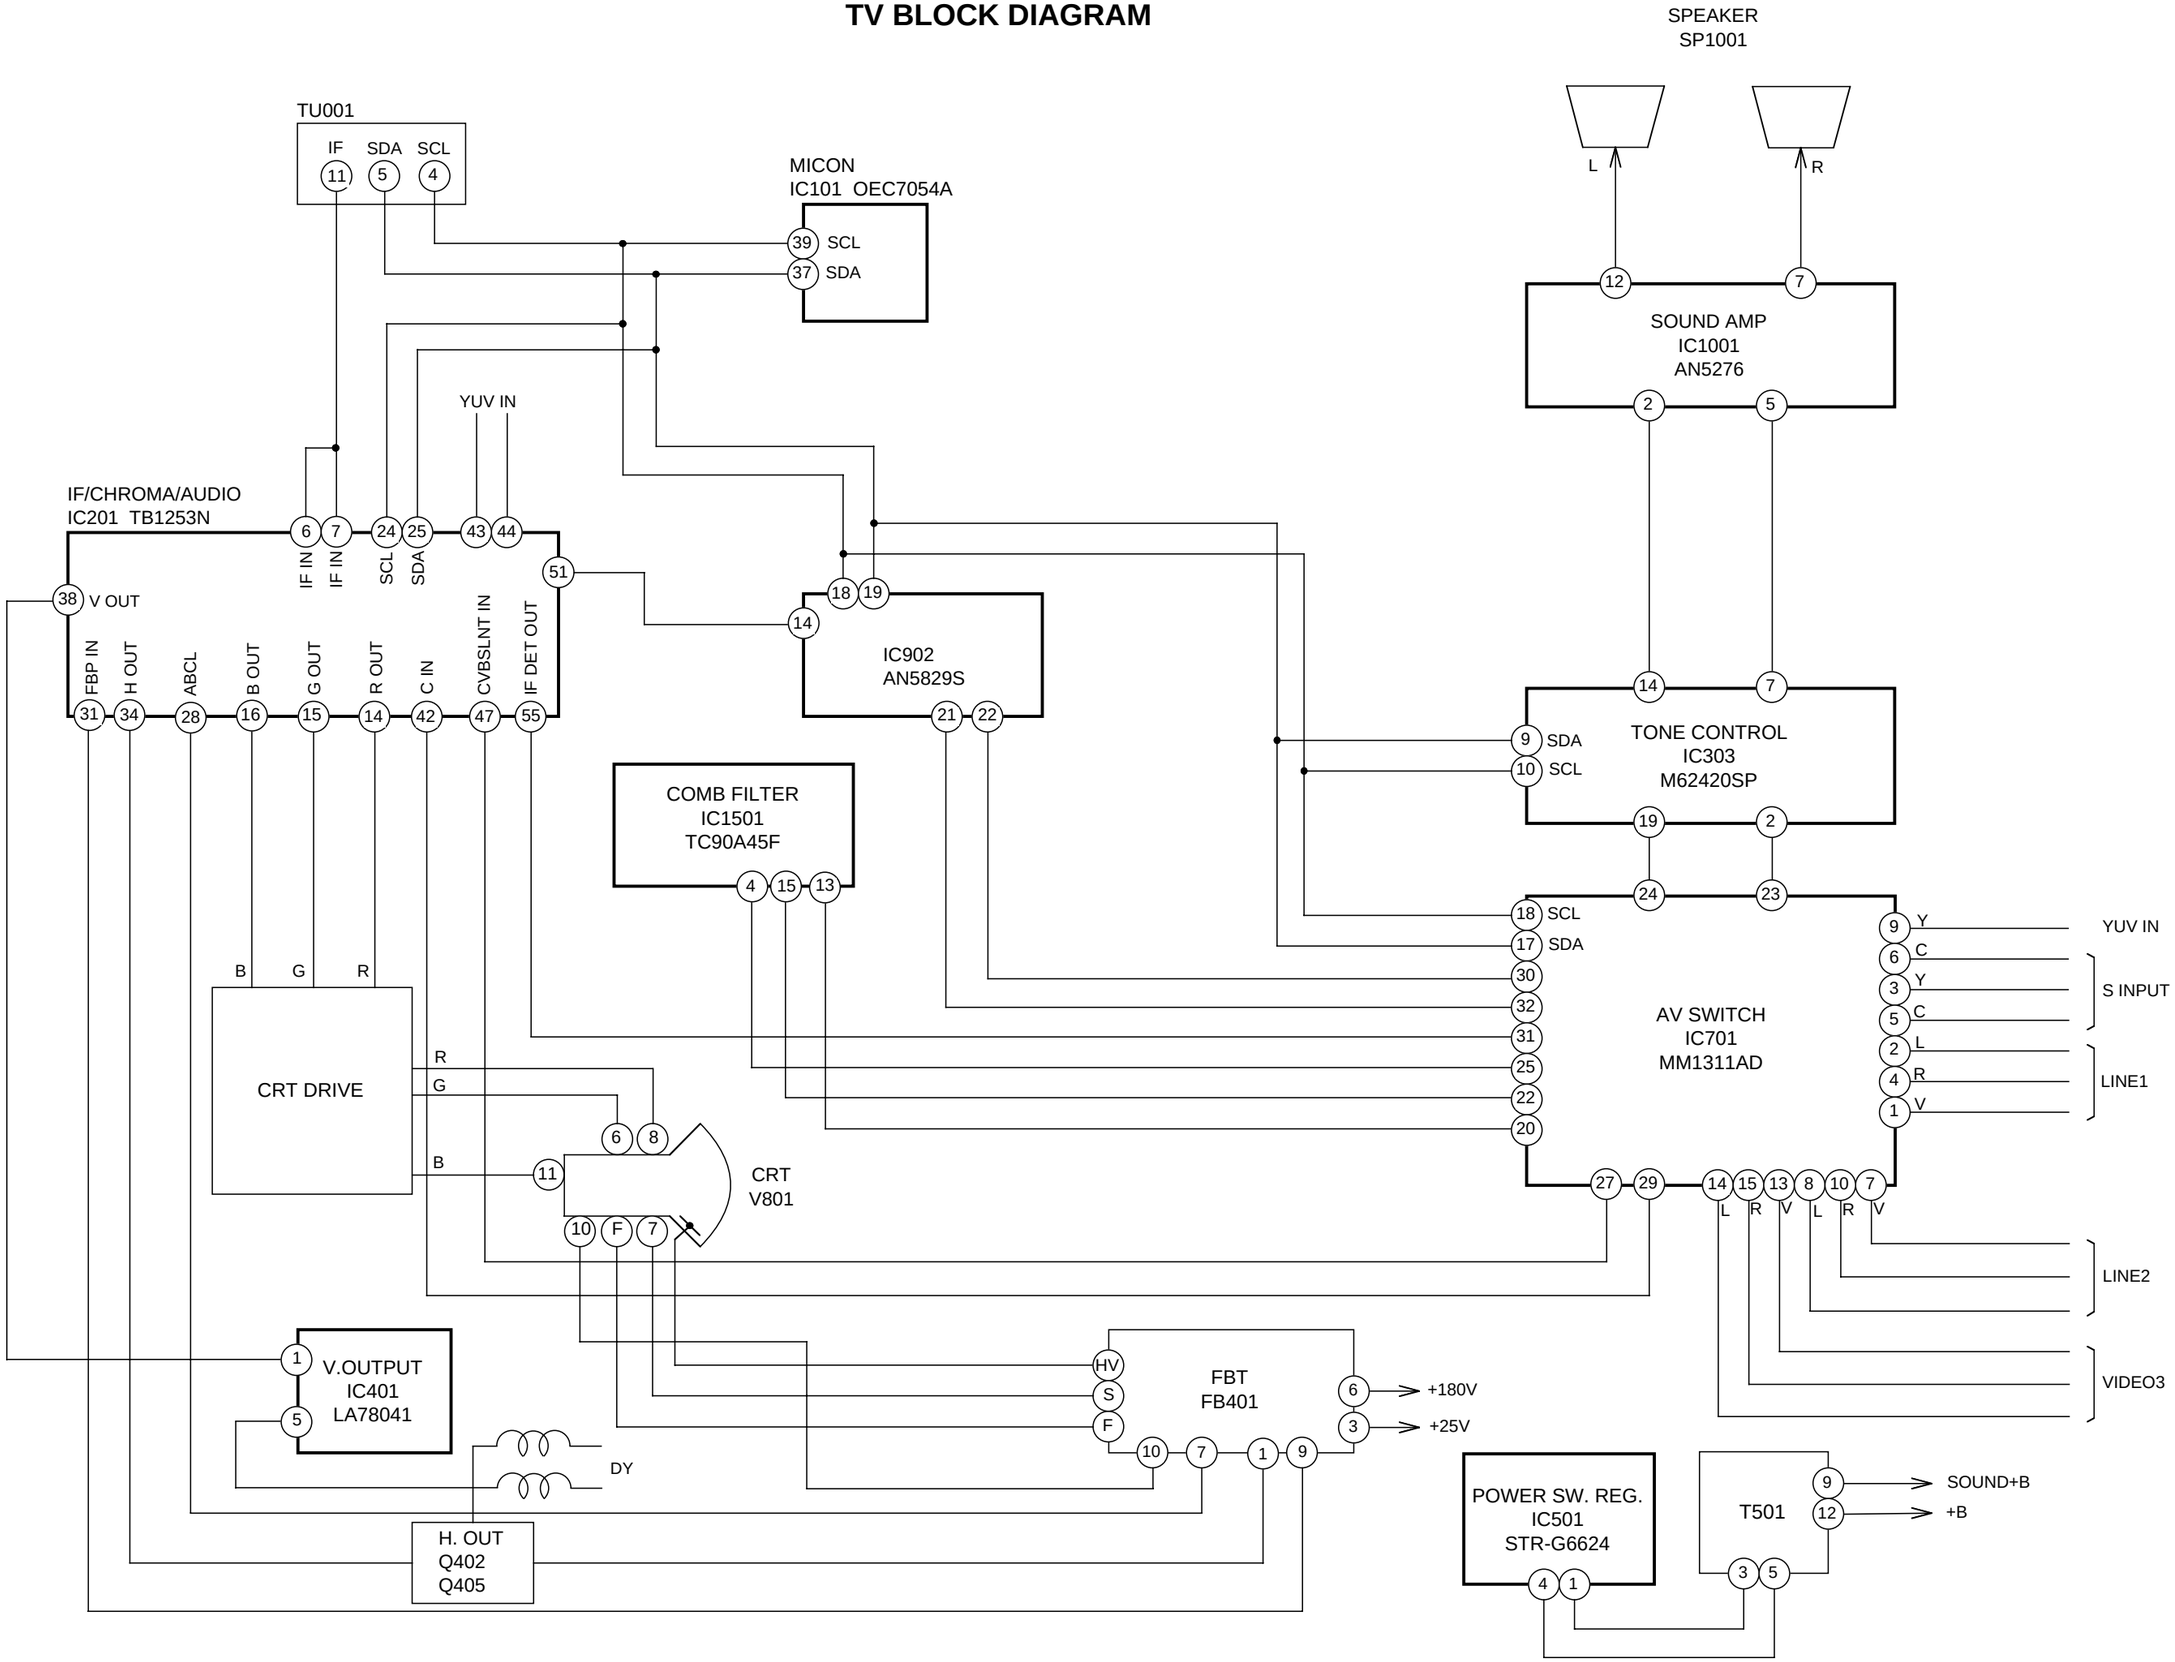

PRINTED CIRCUIT BOARDS

CRT
SOLDER SIDE

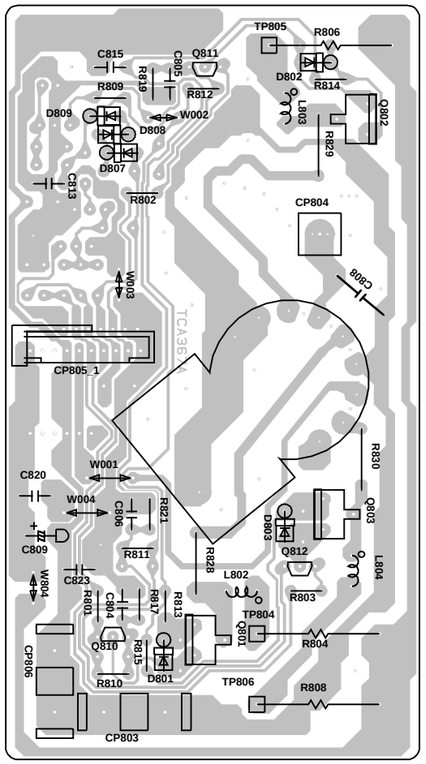

COMB
(INSERTED PARTS)
SOLDER SIDE

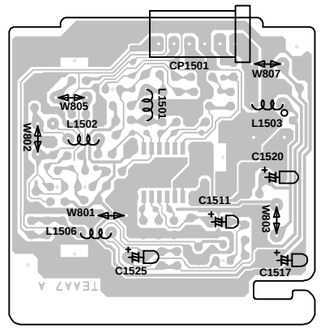

(CHIP MOUNTED PARTS)
SOLDER SIDE

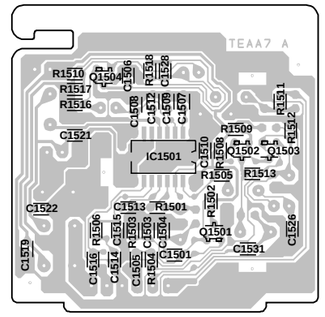

PRINTED CIRCUIT BOARDS
MAIN/VIDEO JACK (INSERTED PARTS)
SOLDER SIDE

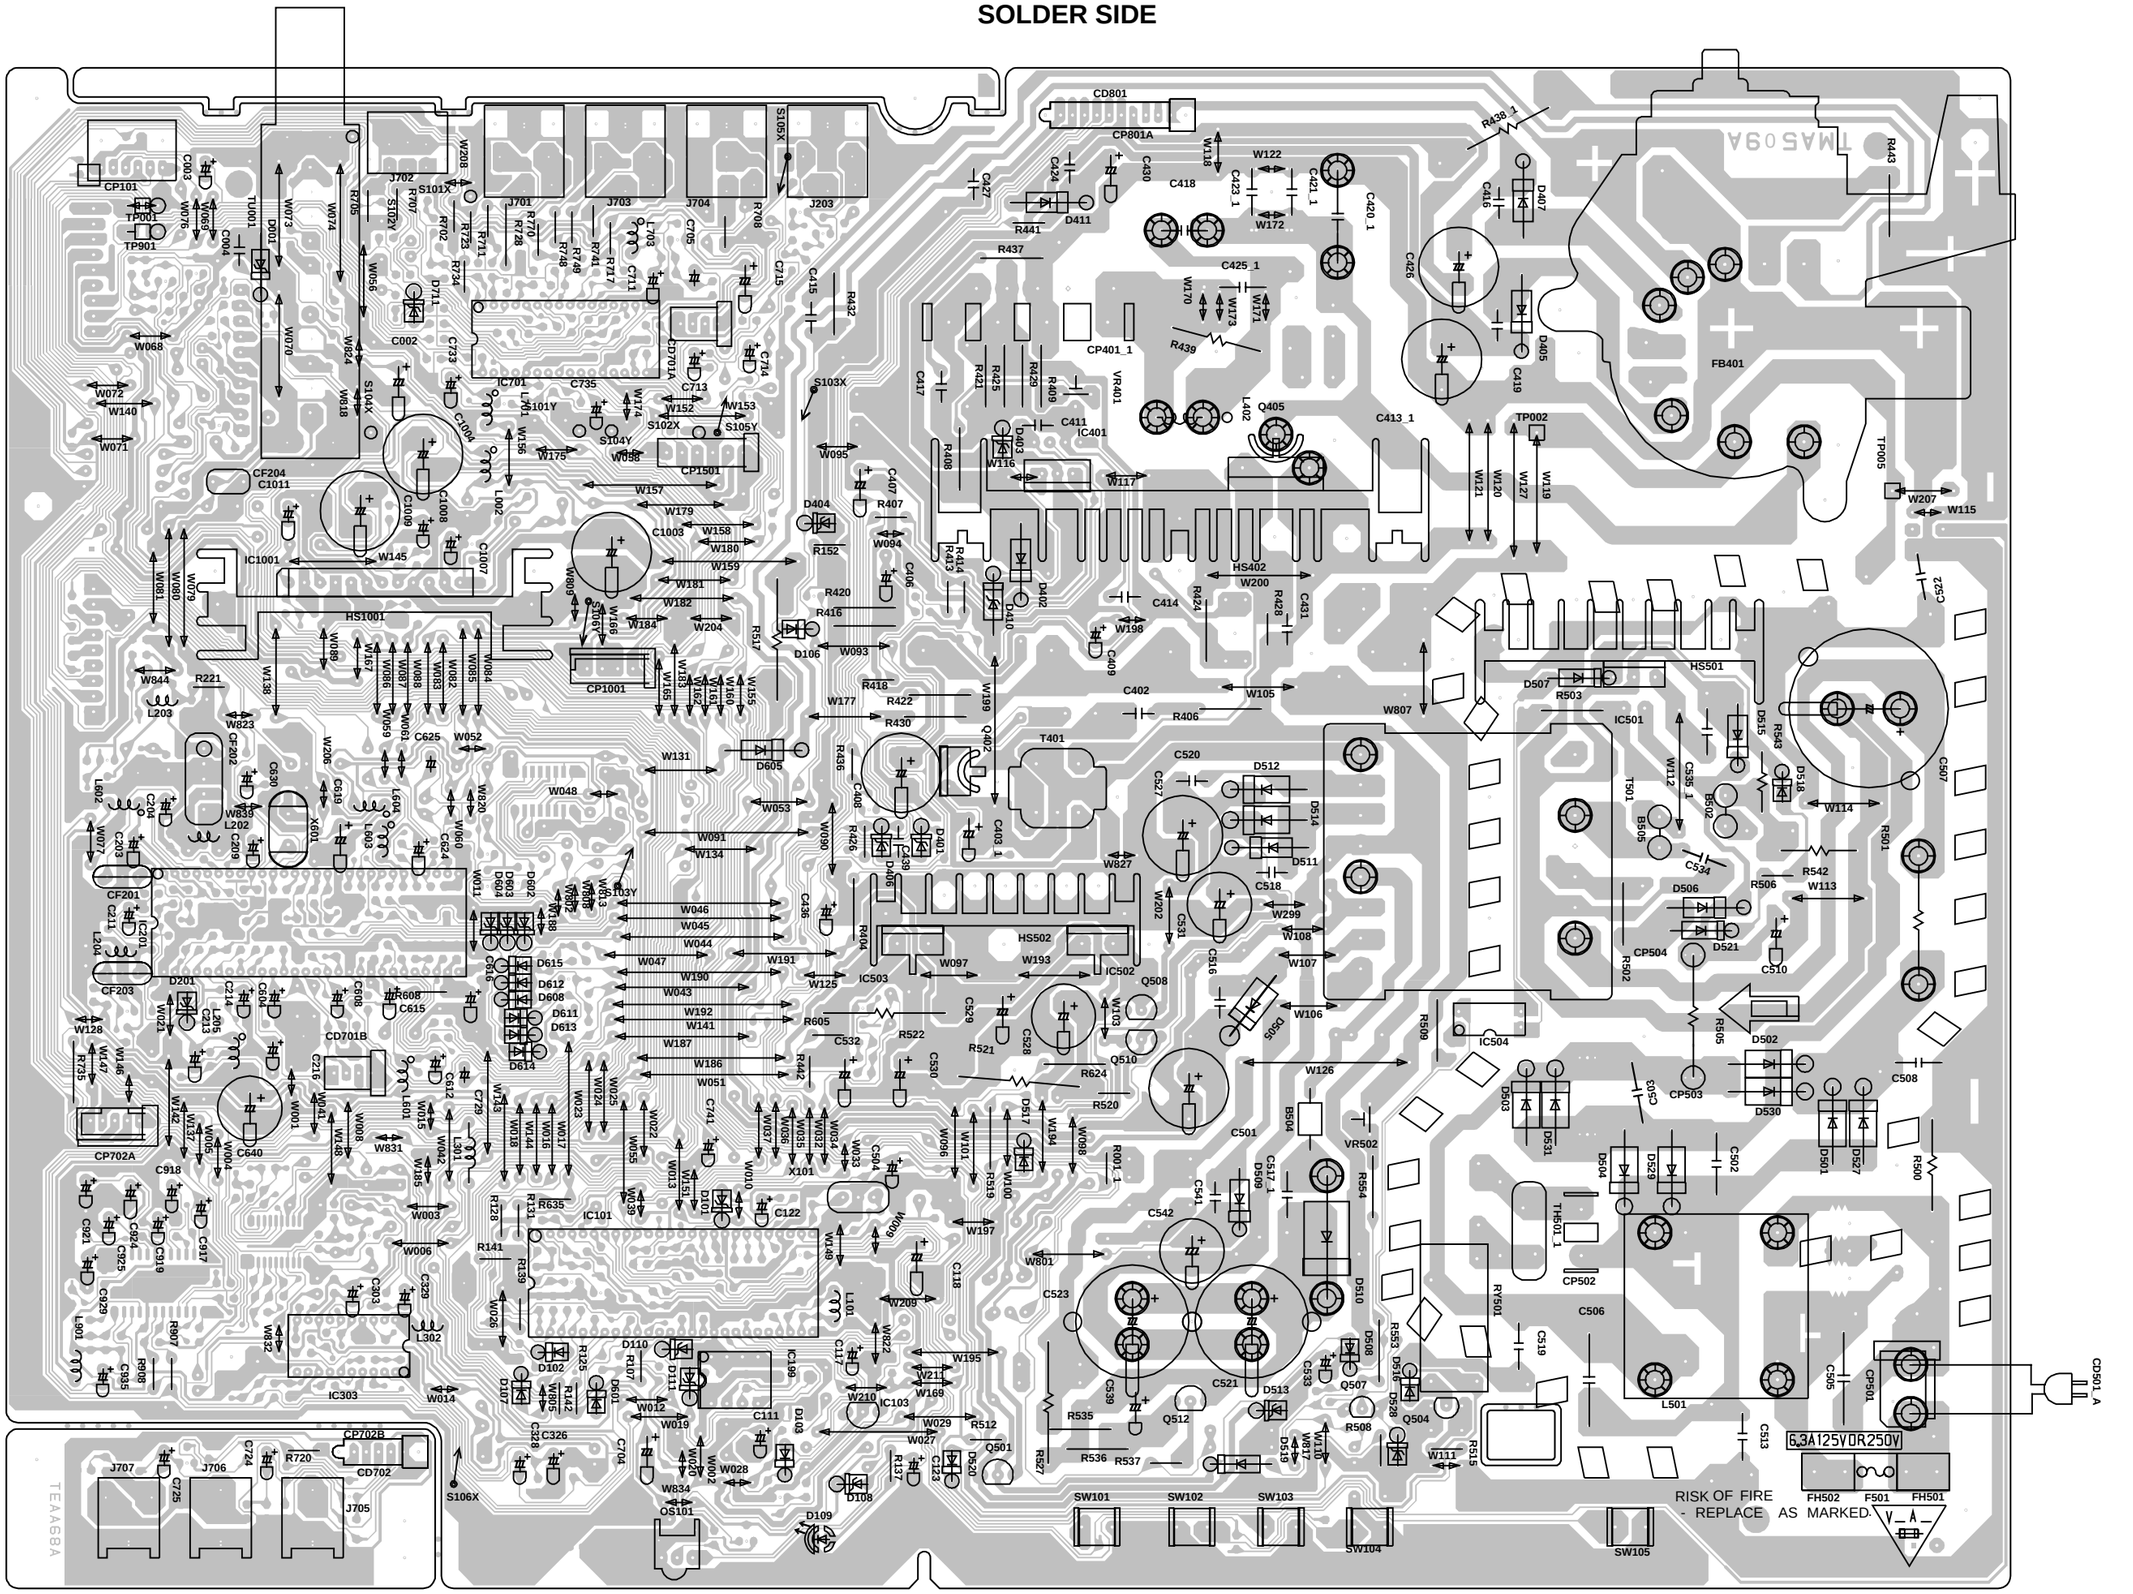
CD801
CP801A
R438
R443
CP101
TP001
TP901
C003
C004
TU001
D001
W076
W068
W073
W074
W056
W070
W824
R705
S101X
S102Y
R707
J702
R702
R723
R734
J701
R770
R728
R711
R748
R749
R741
R717
J703
L703
C711
J704
C705
R708
J203
S105X
C715
C415
R432
C002
D711
C733
IC701
C735
S104X
W818
W072
W140
W071
L701
S101Y
W174
W175
W156
S104Y
W098
S102X
W152
W153
S105Y
CD701A
C713
C714
S103X
W095
CP1501
W157
W179
W158
W180
W159
W181
W182
W184
W204
C1003
C1004
C1009
C1008
L002
C1007
CF204
C1011
IC1001
W145
W081
W080
W079
HS1001
W089
W087
W088
W086
W085
W084
W083
W082
W844
R221
L203
W823
W138
W061
W059
C625
W052
CF202
C639
C619
W205
L602
C204
W839
L702
X601
L603
L604
W820
W060
C624
C209
C203
W007
CF201
C211
L204
C201
CF203
D201
W023
C214
C213
L205
C604
C608
R608
C615
D615
D612
D608
D611
D613
D614
D602
D603
D604
W813
W814
W808
W807
W188
W189
W190
W191
W192
W187
W186
W051
W046
W045
W044
W047
W043
W141
W125
W097
W193
IC503
IC502
HS502
R605
R522
C532
R521
C529
C528
C530
R624
R520
R442
C436
R404
C406
R426
D401
C439
D406
C403_1
T401
W827
W202
C531
C516
W299
W108
W107
W106
W103
Q508
Q510
R509
IC504
W126
C501
VR502
R554
R001_1
D517
D508
C517_1
W194
W008
W096
W101
W100
R519
W197
W801
C542
C541
C523
C539
C521
D513
Q512
C533
D508
Q507
D510
D528
Q504
R553
R535
R536
R537
R527
W817
W816
W111
R515
SW101
SW102
SW103
SW104
SW105
C520
D512
D514
D511
C518
C527
W807
IC501
D515
R543
D518
R501
C507
W114
W112
T501
B505
B502
C535_1
C534
D506
R506
R542
W113
CP504
D521
C510
R502
R505
D502
C508
CP503
D530
C513
D503
D531
D504
D529
D501
D527
C502
R500
TH501_1
CP502
RY501
C506
L501
C519
C505
CP501
C513
CD501_A
6.3A125VOR250V
FH502
F501
FH501
RISK OF FIRE
- REPLACE AS MARKED.
C522
W207
W115
TP005
TP002
W121
W120
W127
W119
C413_1
C426
C416
D407
D405
C419
FB401
C420_1
C421_1
W122
W172
C422_1
W118
C418
C430
C424
C427
R441
D411
R437
C425_1
W170
W173
W171
R439
CP401_1
VR401
C417
R421
R425
R429
R409
L402
Q405
C411
IC401
D403
W116
W117
R408
D402
D410
R414
R413
C414
R424
R428
C431
HS402
W200
C409
W198
C402
W105
R406
R422
R430
W177
R418
R420
R416
W093
D106
R517
W094
R407
C407
D404
R152
C406
W199
Q402
W131
D605
W053
W048
W090
W091
W134

PRINTED CIRCUIT BOARDS
MAIN/VIDEO JACK (CHIP MOUNTED PARTS)
SOLDER SIDE

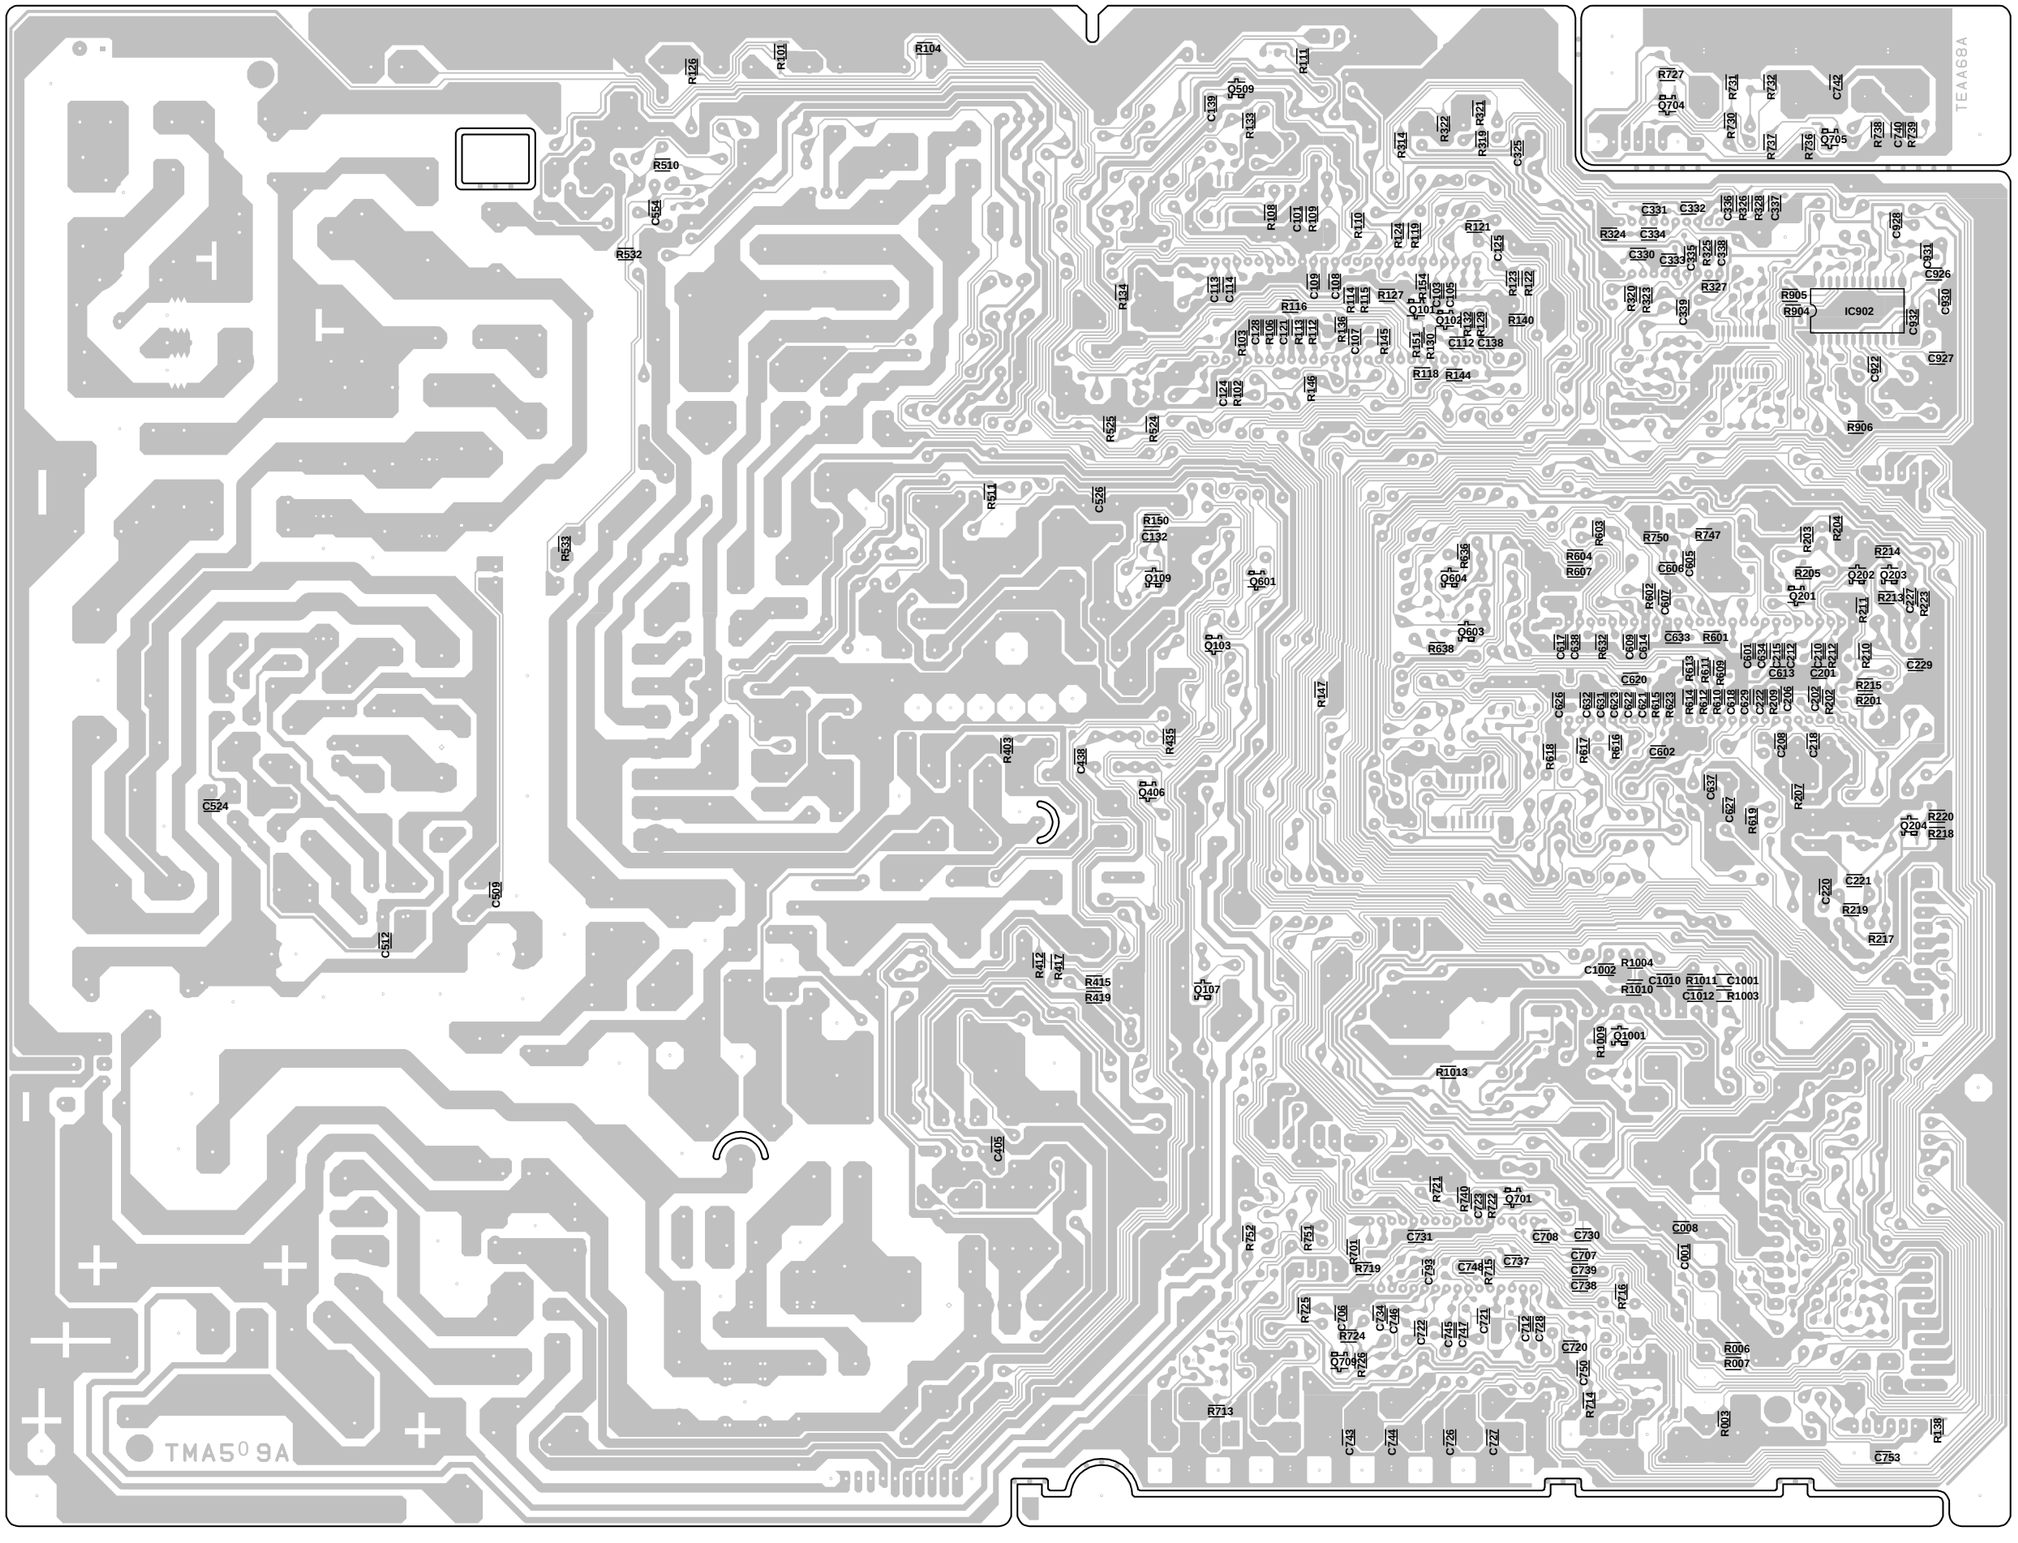

MICON / TUNER SCHEMATIC DIAGRAM

(MAIN PCB)

ACCESORY
BT001 R03(AB)E_20_T
BT002 R03(AB)E_20_T
TM101 SBKMOP006A

OS101 PIC-28143SY-2
Vout B+ GND
C123 16V10 KA
R111 47

TU001 ENV56D66G3
IF NC BTL BPL V.S SDA SCL 3WDRES NC AGC
W818 W824
C008 0.01 B
C004 0.022 M
D001 MTZ33A
C001 0.01 B
C002 470 YK 6.3V
R006 270
R007 270
R003 330K
C003 50V 2.2 KA
L002 100uH
R001_1 2.7K 1/4W

TEST POINT CP101 TKC-M06X-A1
GND I2C SCL I2C SDA I2C OFF VIDEO OUT AGC
AGC TP001

R127 1K
R130 820
H-BUFFER Q102 2SC2412K
V-BUFFER Q101 2SC2412K
C138 0.01 B
R129 3.9K
R128 33K 1/4W
R131 10K 1/4W
R132 33K
RED LED
POWER ON
D109 SLR-342VCT32
R137 68 1/4W
D108 MTZ5.6B
C112 0.0022 B

MICON IC101 OEC7054A
H SYNC
V SYNC
PIP_AFT
REMOCON
NC
SYNC
KEY 1
KEY 2
X RAY
AFT
PIP_SD
PIP_AGC_ADJ
NC
NC
P FAIL
NC
NC
AVCC
HLF
RVCO
VHOLD
CVIN
CNVSS
X.IN
X.OUT
VSS
OSD R
OSD G
OSD B
OSD BLK
X-RAY TEST
NC
EXT MUTE
TV MUTE
BBE H
IIC OFF
NC
POWER
H TONE OUT
SCL1
SCL2 (PIP)
SDA1
SDA2 (PIP)
SPOT KILLER
DEGAUSS H
LED
PIPAV2
PIPAV1
RESET
OSC2
OSC1
VCC

R154 10K
C105 150P CH
C103 150P CH
R123 4.7K
R122 4.7K
R121 4.7K
D102 1SS133
W805
D107 1SS133
R139 1K 1/4W
R140 1K
R141 1K 1/4W
R142 10K 1/4W
Q103 KRC102RTK
C125 10P CH
R125 47K 1/4W
R119 47K
R124 47K
R138 1K
R110 10K
R107 1K 1/4W
C108 100P CH
R108 2.2K
C109 100P CH
R109 2.2K
D110 MTZJ6.8B
D111 MTZJ6.8B
MTZ6.8B

R115 47K
R118 10K
R144 10K
R150 4.7K
C132 220P CH
SYNC SEP. Q109 2SC2412K
R151 4.7K
R126 2.7K
R101 560
R104 560
R114 2.2K
R116 2.2K
R136 4.7K
SW102 SKHVBED010 CH DOWN
SW104 SKHVBED010 VOL DOWN
SW105 SKHVBED010 POWER
SW101 SKHVBED010 CH UP
SW103 SKHVBED010 VOL UP
R145 4.7K
R146 4.7K
D101 MTZJ5.1B
C107 0.01 B
R112 10K
R113 10K
C122 50V1 KA
R102 1K
C121 200P CH
R106 15K
C128 0.001 B
C124 0.1 B
R103 1M
R147 1K
X101 EFOEC8004T4
C118 6.3V 2200YK
C139 0.01 B

W822
W834
L101 2.7uH
C114 82P CH
C113 82P CH
C101 0.01 B
MEMORY IC199 S-24C08ADPA-01
SDA SCL MODE VCC VSS E2 E1 E0

RESET IC103 PST600C
VCC GND V.OUT
R133 10K
D103 1SS133
C111 50V1 KA
C117 50V0.47 KA
R134 10K

FROM/TO CHROMA/IF
SYNC_OUT
SPOT_KILLER
AFT_OUT
FROM/TO DEFLECTION
V.OUT1
AFC
X-RAY
SPOT_KILLER
FROM/TO POWER
X-RAY
P.FAIL
FROM/TO AV
CV_IN

FROM/TO CHROMA/IF
AGC SCL SDA IF OSD_R OSD_G OSD_B OSD_BLK H_TONE_H
FROM/TO DEFLECTION
X-RAY_TEST
FROM/TO AV
SCL SDA EXT_MUTE
FROM/TO SOUND
TV_MUTE
SDA SCL
FROM/TO POWER
POWER GND_POWER P.CON+5V AT+40V AT+5V DEGAUSS_H P.CON+9V

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: DIGITAL TRANSISTOR

PCB010
TMA509

CHROMA / IF SCHEMATIC DIAGRAM
(MAIN PCB)

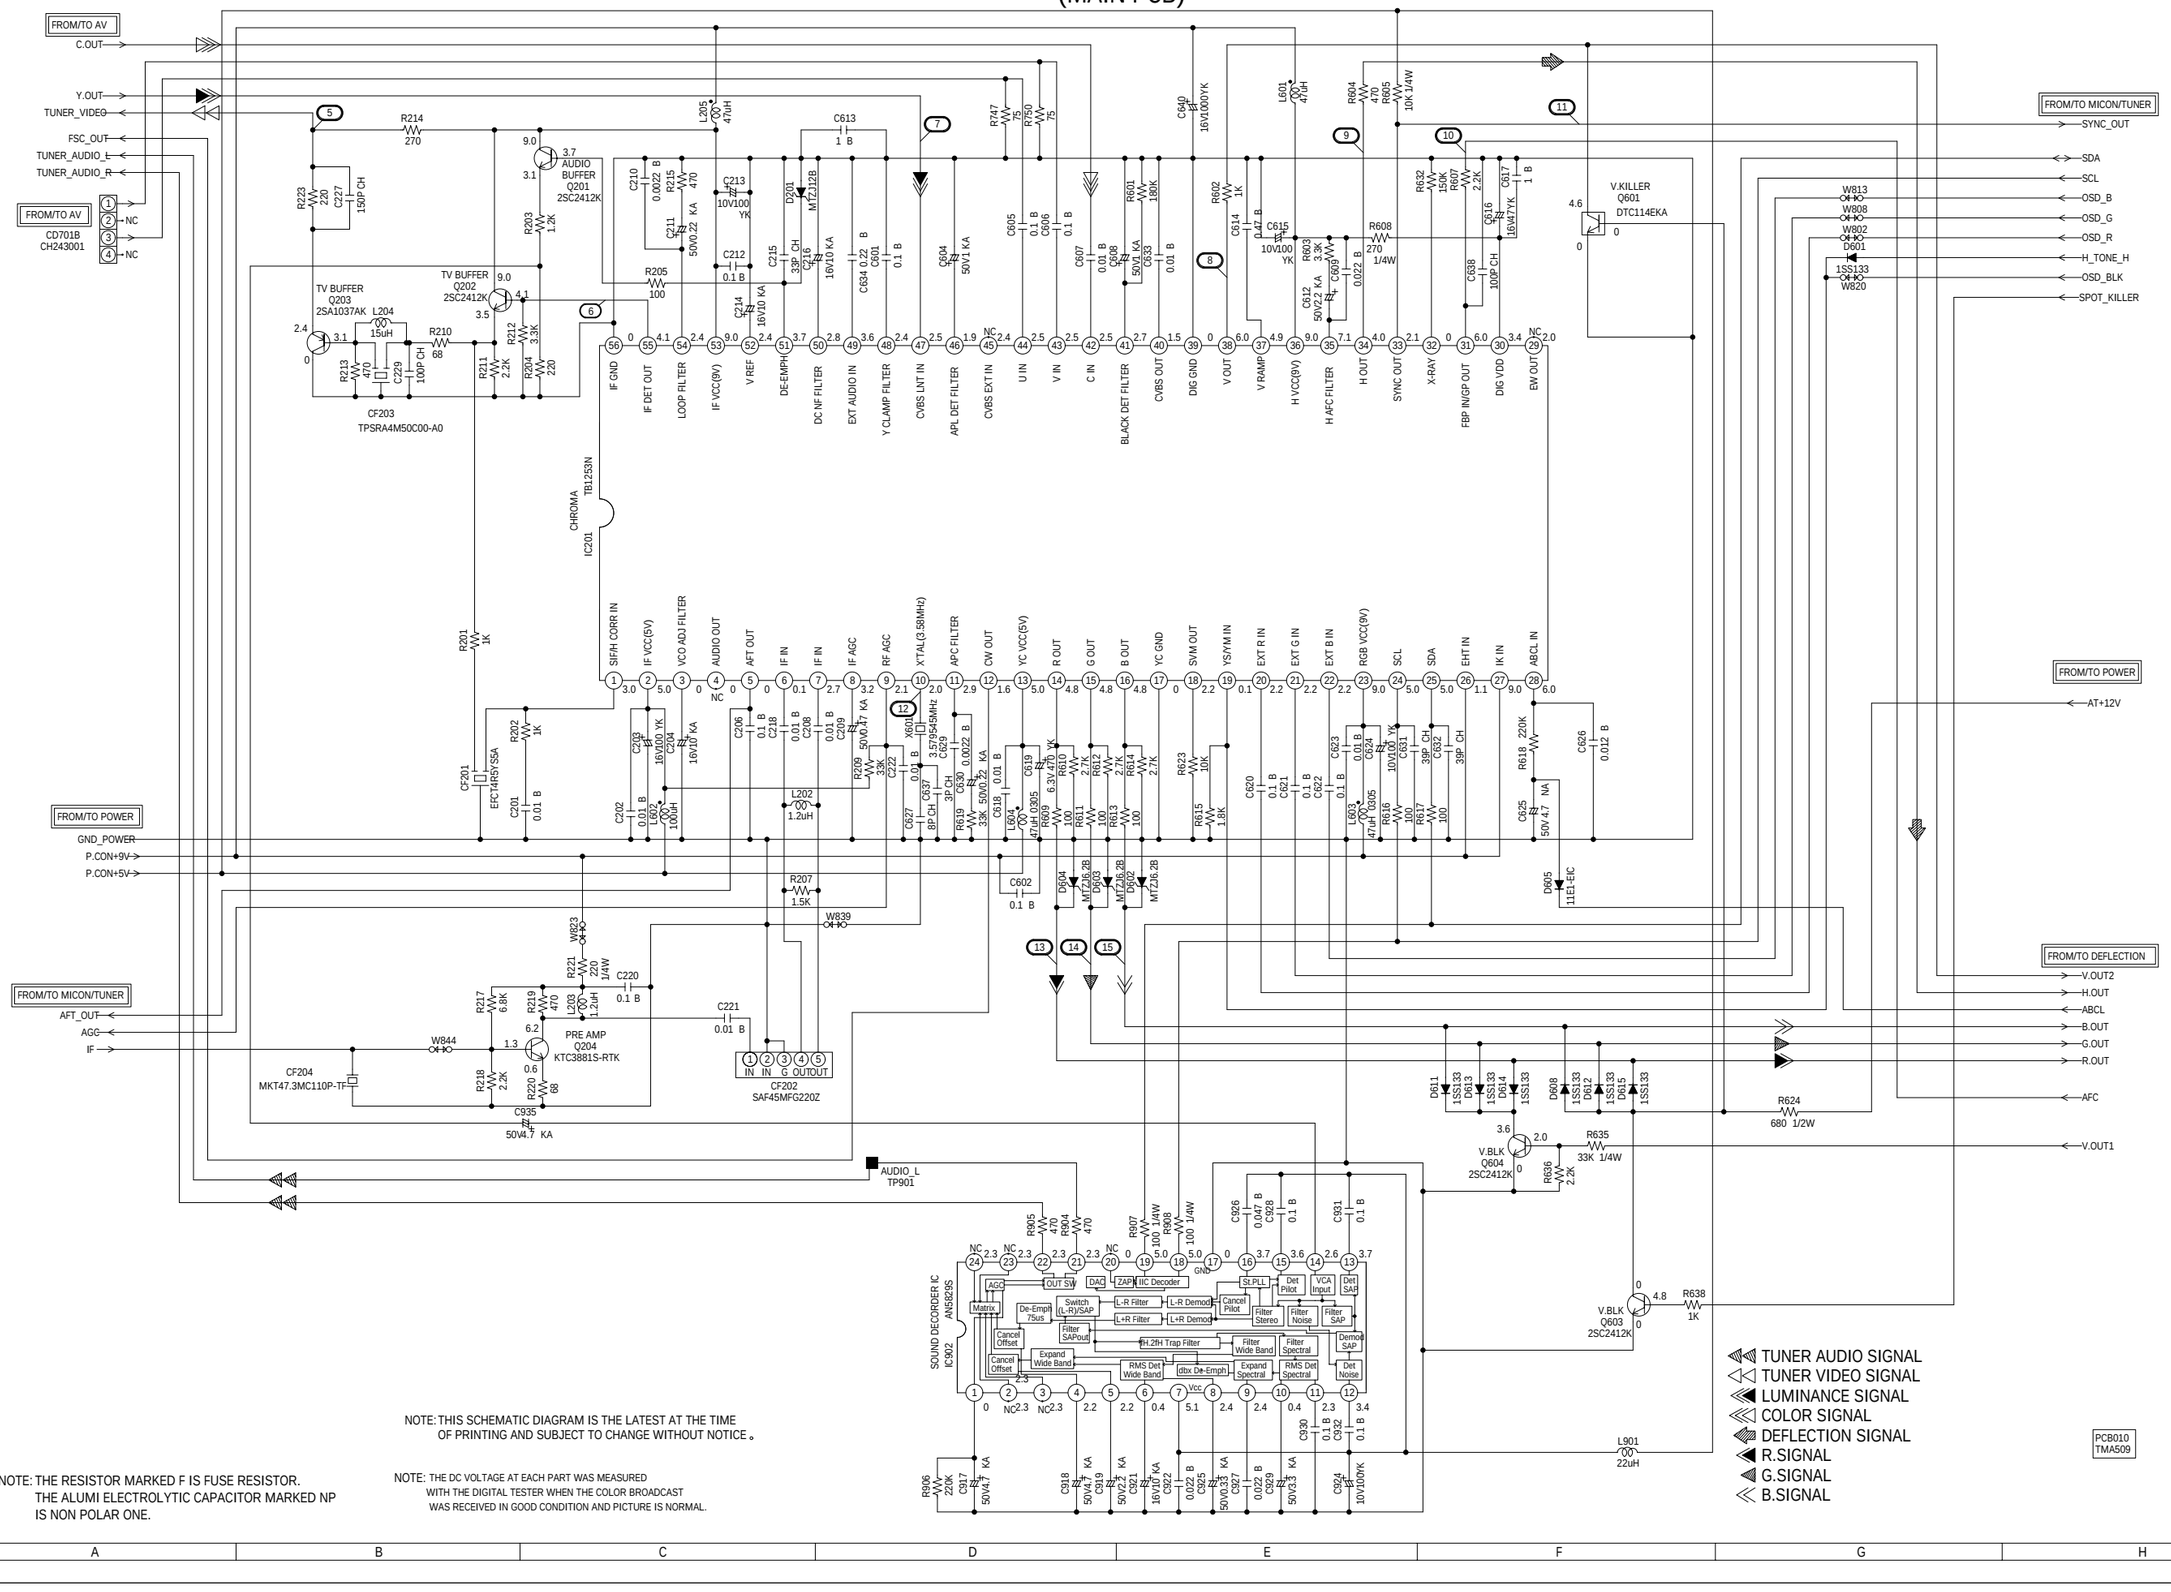

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP
IS NON POLAR ONE.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

DEFLECTION SCHEMATIC DIAGRAM

(MAIN PCB)

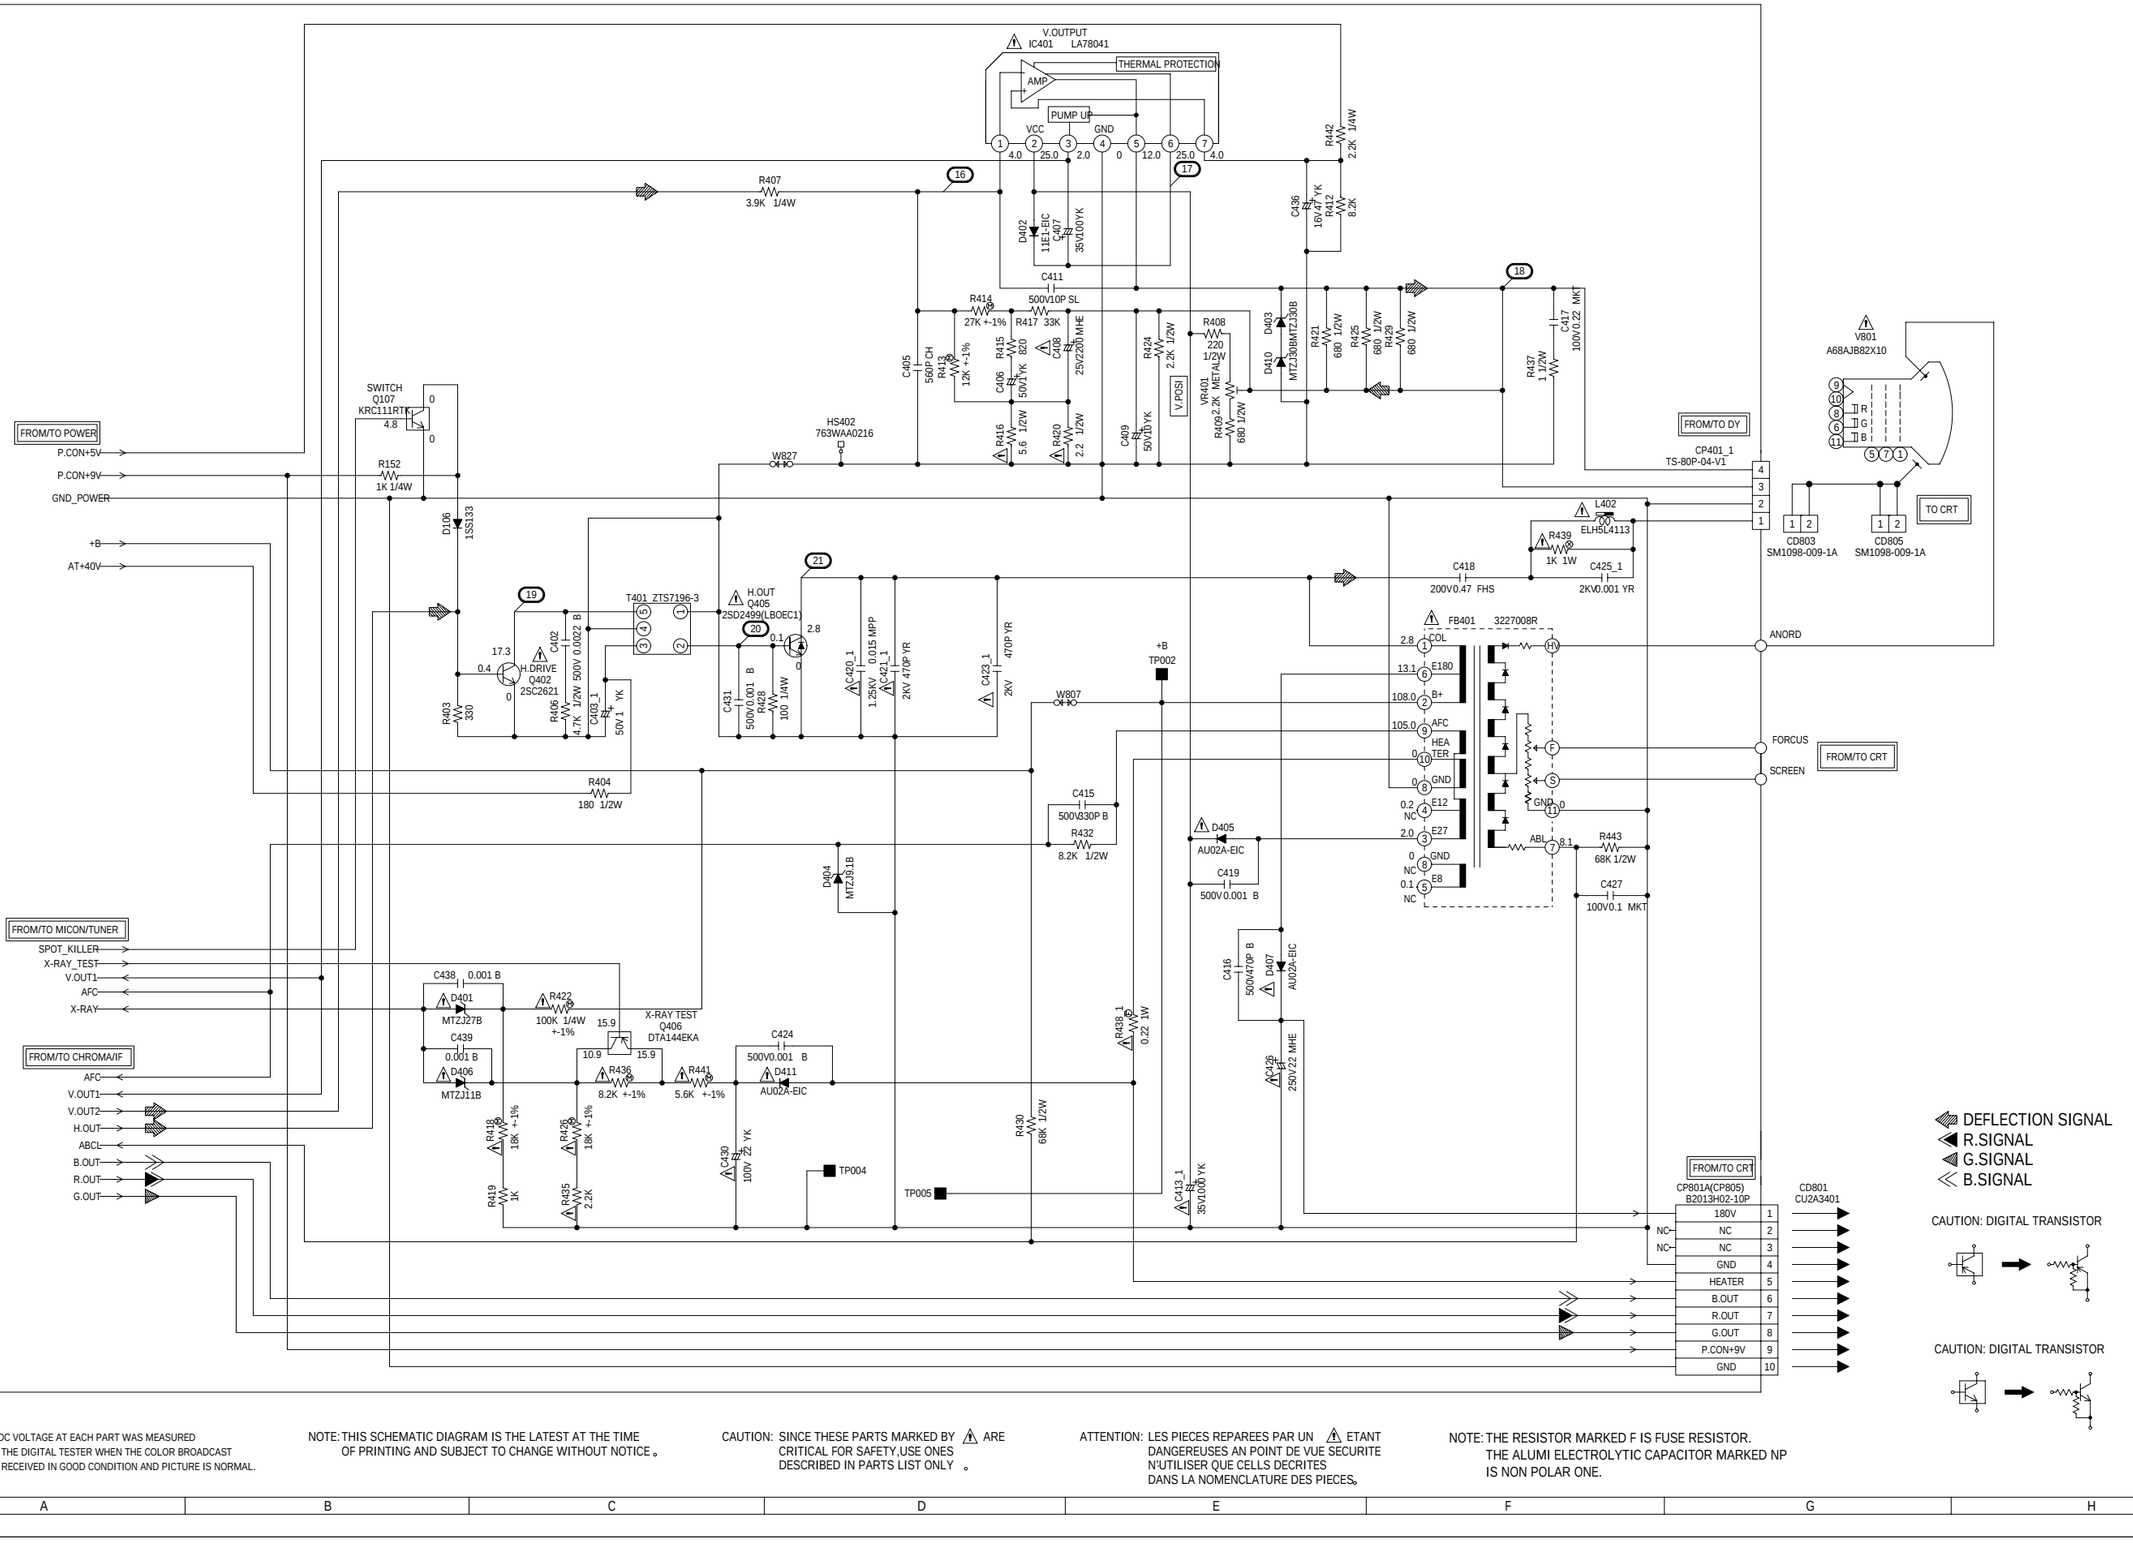

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

POWER SCHEMATIC DIAGRAM

(MAIN PCB)

6.3A 125V

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE
6.3A 125V(F501)

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE
N'UTILISER QUE DES FUSIBLE DE MEME TYPE
6.3A 125V(F501)

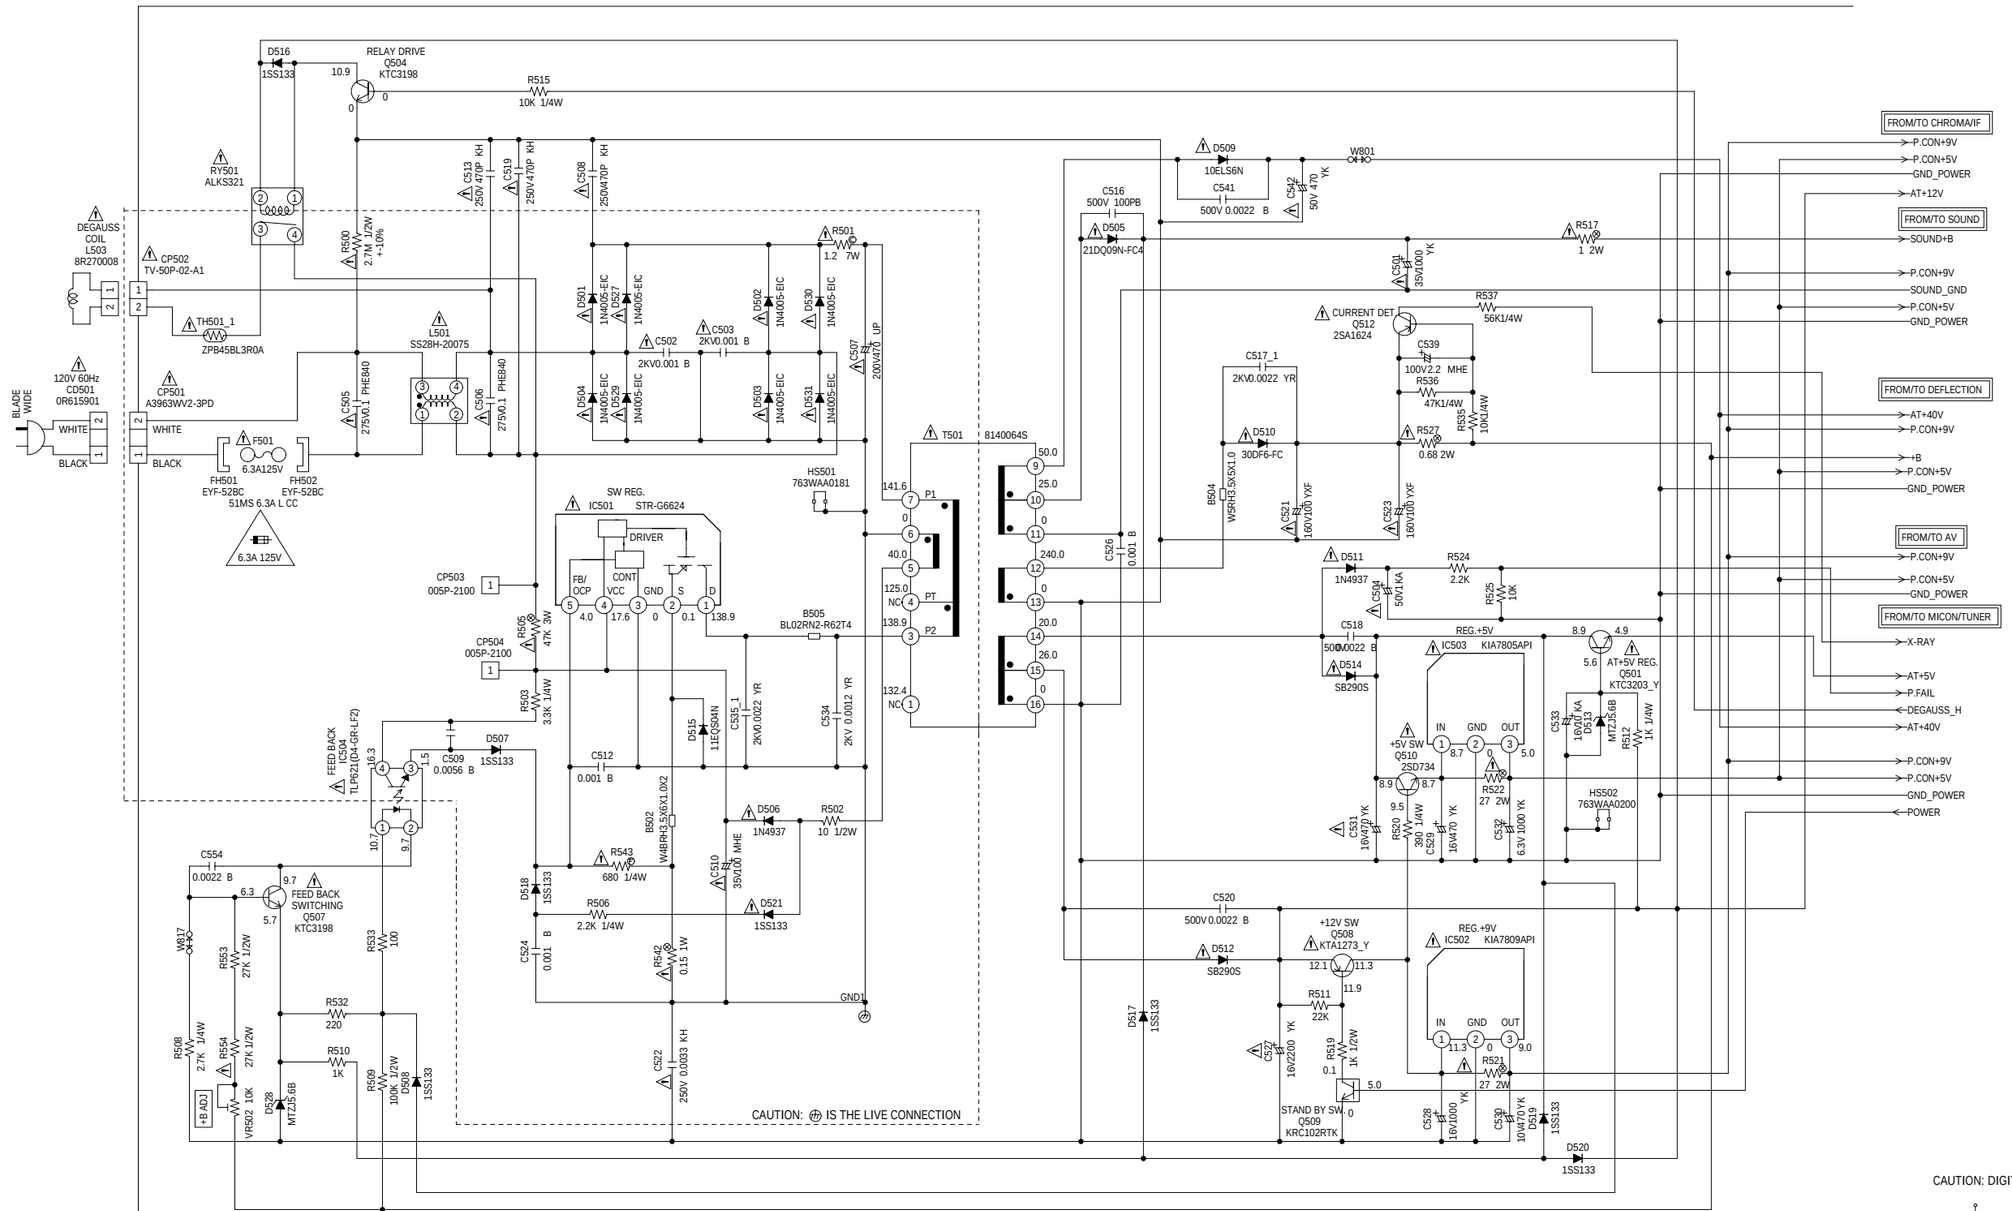

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

PCB010
TMA509

SOUND SCHEMATIC DIAGRAM

(MAIN PCB)

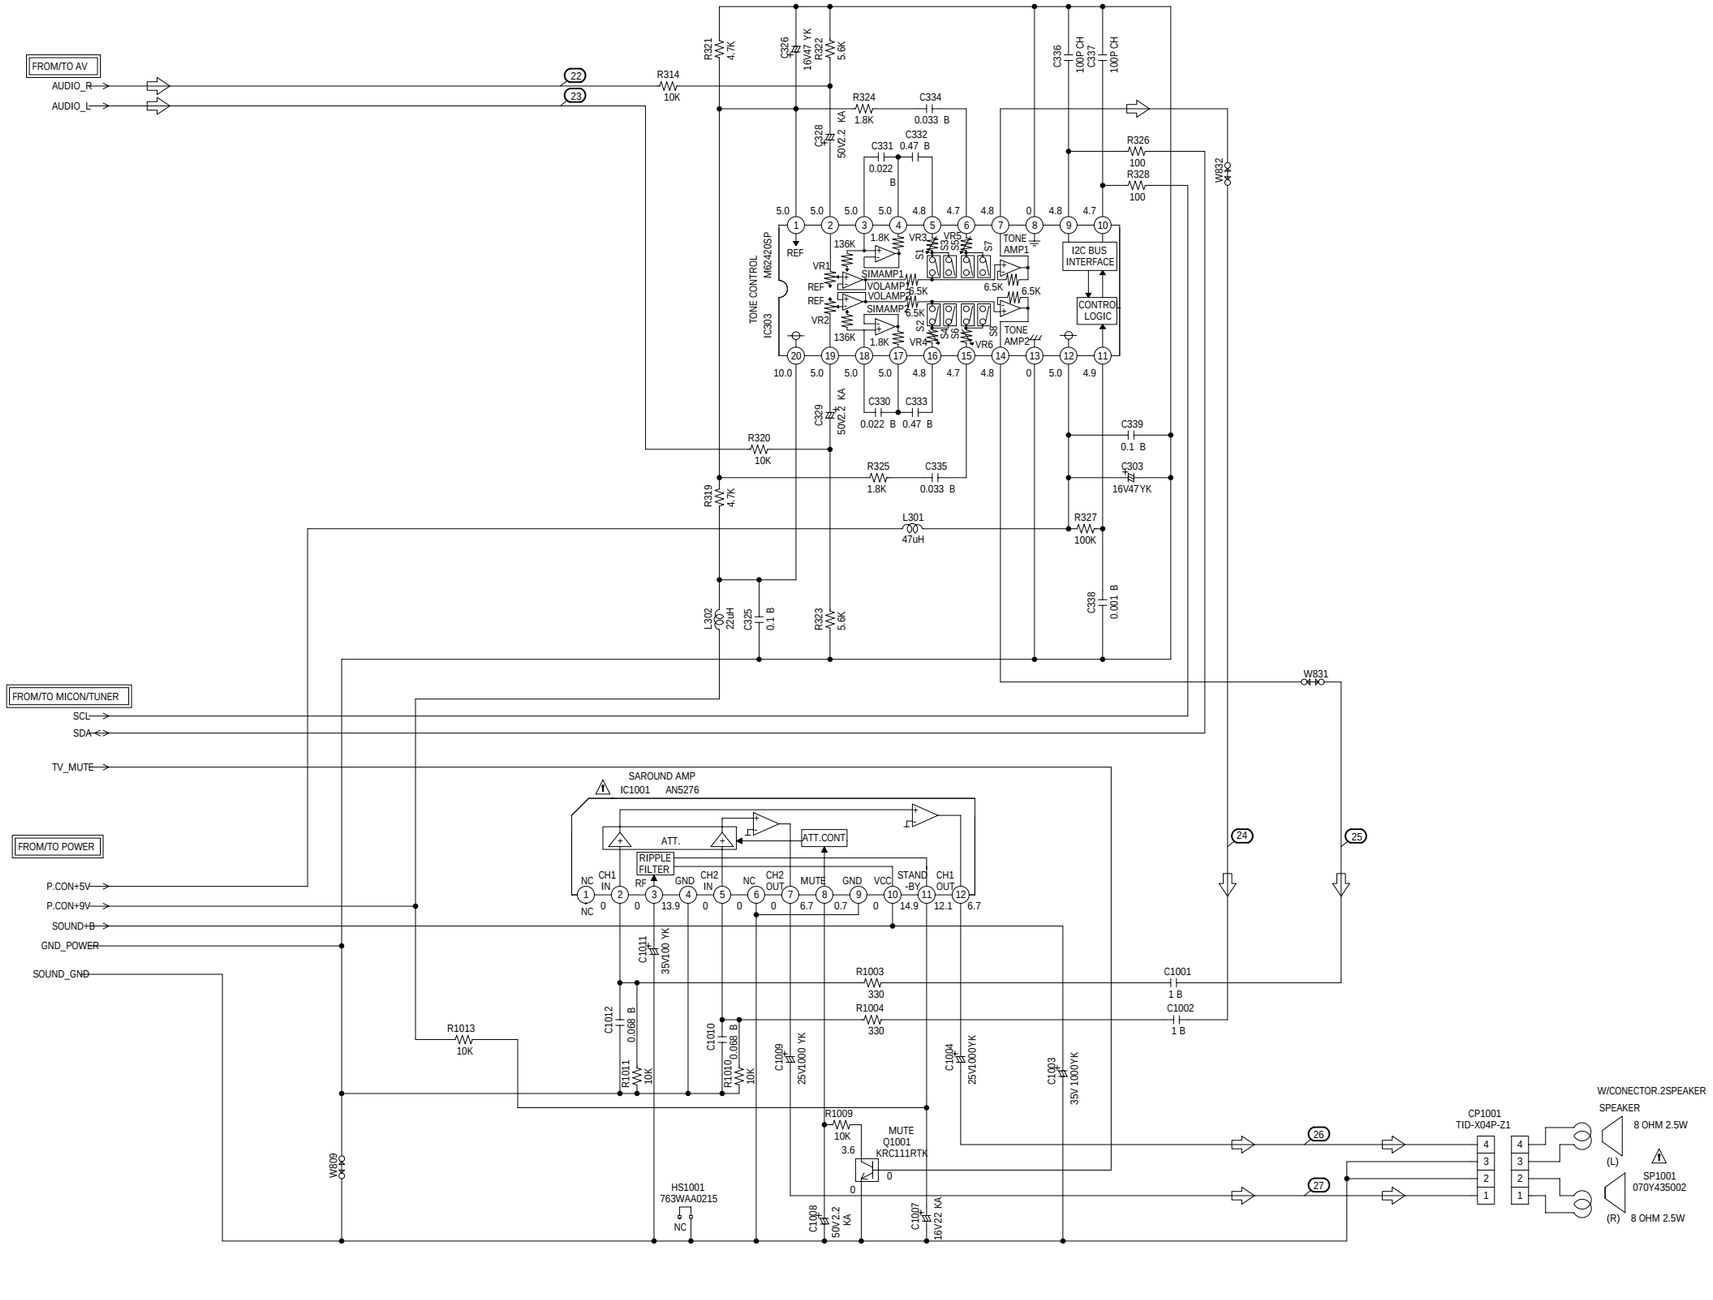

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

PCB010
TMA509

AV SCHEMATIC DIAGRAM

(MAIN PCB)

FROM/TO COMB FILTER

CP1501
6035B-06Z002-T

6	MONITOR V.OUT
5	Y IN
4	C IN
3	GND
2	FSC
1	P.CON+5V

FROM/TO POWER
P.CON+9V
P.CON+5V
GND_POWER

FROM/TO CHROMA/IF
FSC_OUT
TUNER_AUDIO_L
TUNER_AUDIO_R
TUNER_VIDEO
C.OUT
Y.OUT

FROM/TO SOUND
AUDIO_L
AUDIO_R

FROM/TO MICON/TUNER
EXT_MUTE
CV_IN
SCL
SDA

FROM/TO CHROMA/IF
CD701A
CH243001

YUV_IN(REAR)
J704
AV3-19D-5

A/V_OUT(REAR)
J203
AV3-19DS-1

LINE2(REAR)
J703
AV3-19DS-1

LINE1(REAR)
J701
AV3-19DS-1

S-JACK
J702
YKF51-5503

AV SW
IC701 MM1311AD

BUFFER
Q709
2SA1037AK

BUFFER
Q701
2SC2412K

D711
MTZJ6.2B

CP702A
A2001WV2-5P

CD702
CU252002

CP702B
B2013H02-5P

1	FRONT.VIDEO	1
2	FRONT.AUDIO.L	2
3	FRONT.AUDIO.R	3
4	GND	4
5	P.CON+9V	5

PCB010
TMA509

(VIDEO JACK PCB)

PCB170
TEA68

FRONT-VIDEO
J705
AV1-06D-3

FRONT-AUDIO.L
J706
AV1-06D-4

FRONT-AUDIO.R
J707
AV1-06DS-2

BUFFER
Q704
2SC2412K

BUFFER
Q705
2SC2412K

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP
IS NON POLAR ONE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

AUDIO SIGNAL
TUNER AUDIO SIGNAL
TUNER VIDEO SIGNAL
COLOR SIGNAL
LUMINANCE SIGNAL

CRT SCHEMATIC DIAGRAM

(CRT PCB)

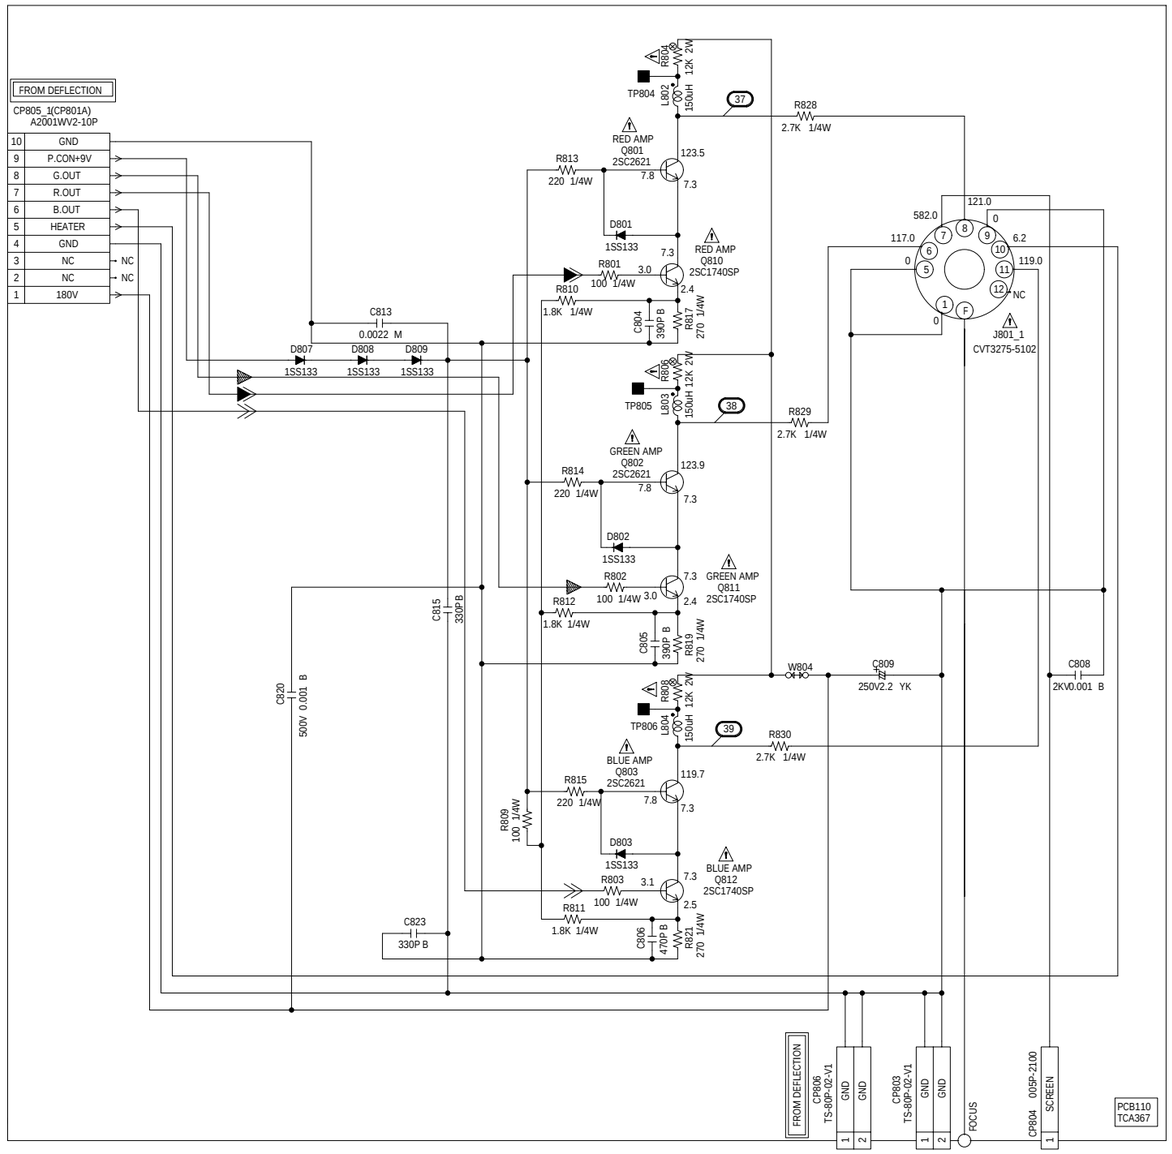

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

DIGITAL COMB FILTER SCHEMATIC DIAGRAM

(COMB PCB)

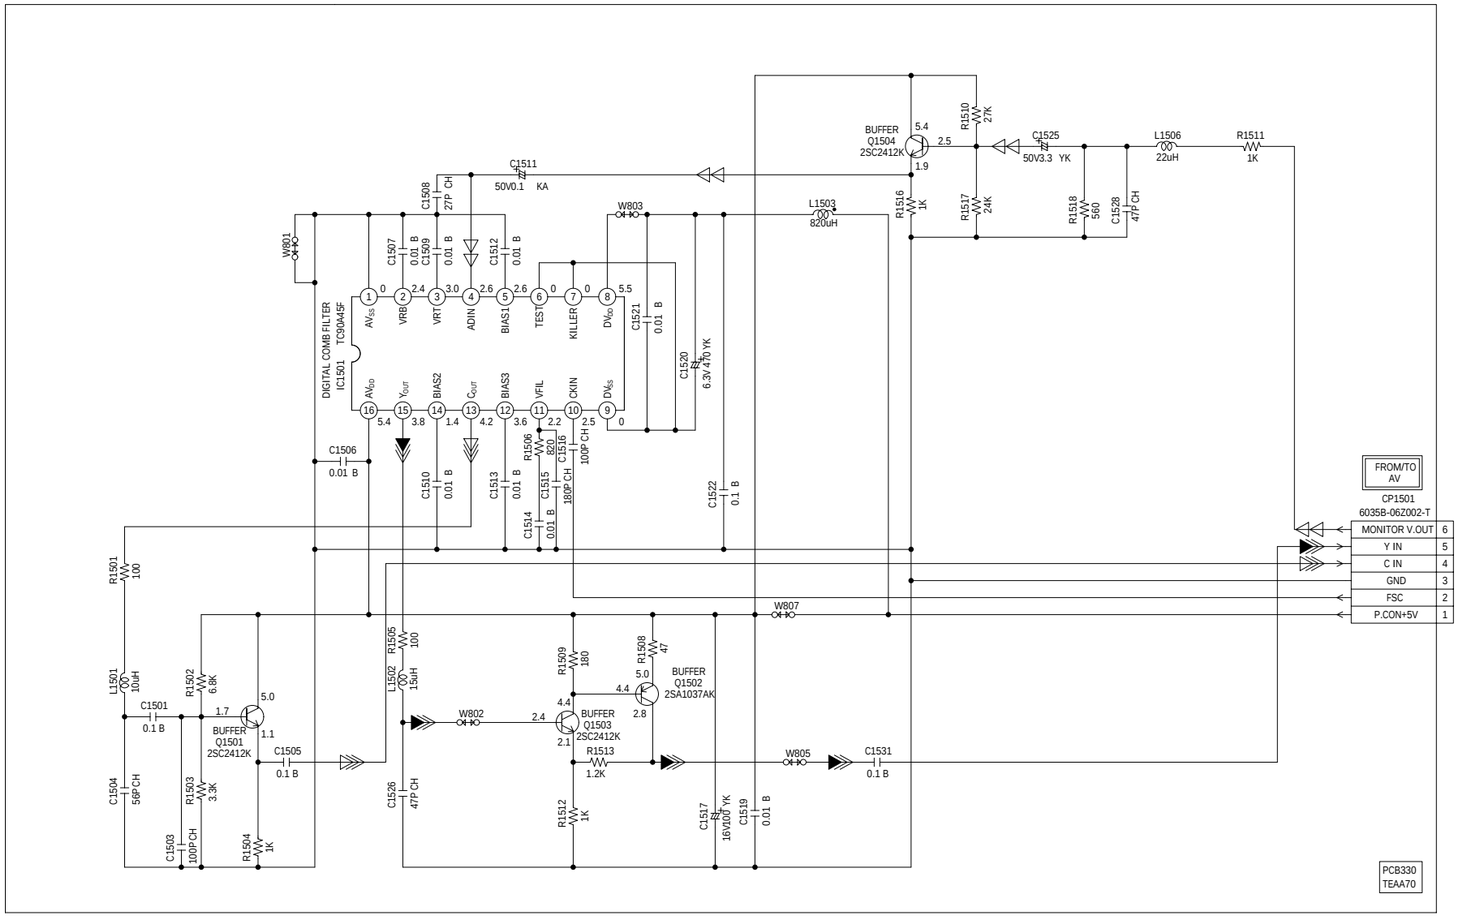

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

RECORD COLOR SIGNAL
RECORD LUMINANCE SIGNAL
TUNER VIDEO SIGNAL

WAVEFORMS

MICON/TUNER

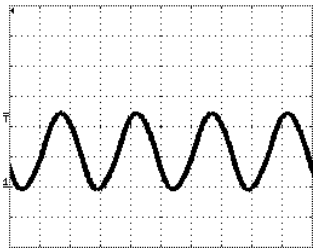

① 2.0V 50ns/div

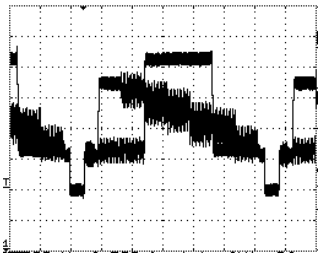

⑥ 500mV 10µs/div

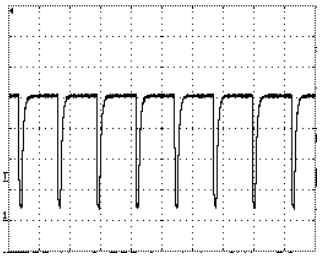

⑪ 500mV 50µs/div

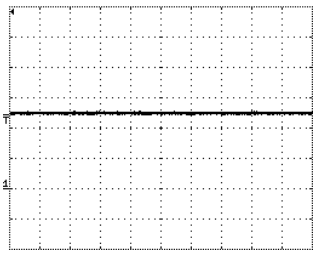

② 2.0V 50ns/div

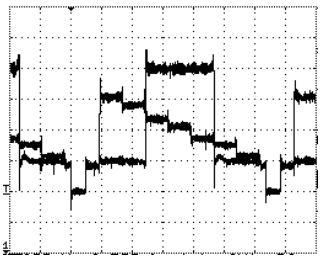

⑦ 200mV 10µs/div

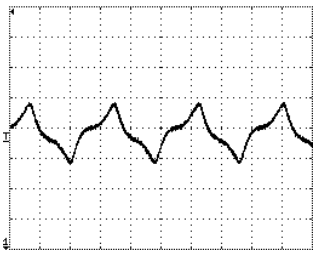

⑫ 100mV 100ns/div

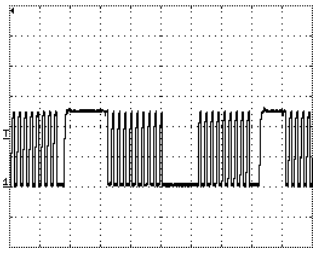

③ 2.0V 50µs/div

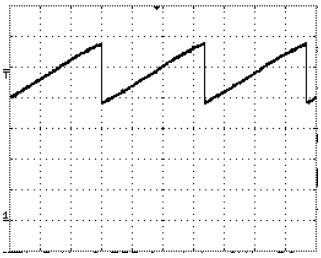

⑧ 1.0V 5ms/div

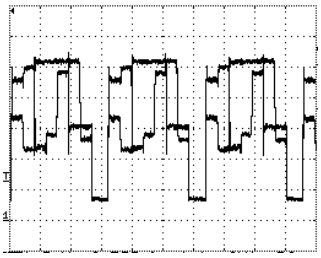

⑬ 1.0V 20µs/div

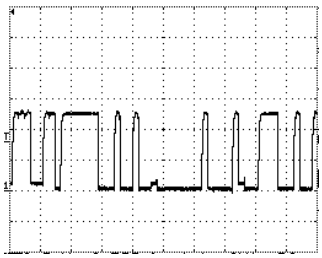

④ 2.0V 50µs/div

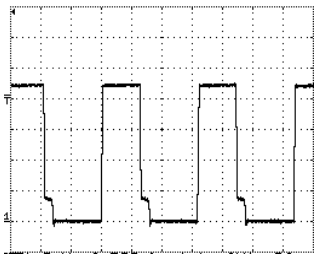

⑨ 1.0V 20µs/div

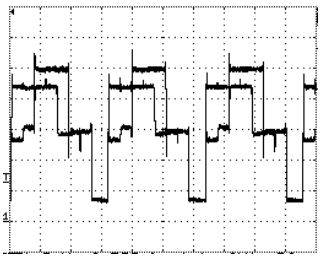

⑭ 1.0V 20µs/div

CHROMA/IF

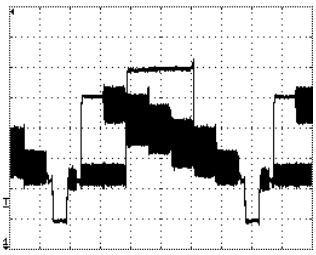

⑤ 200mV 10µs/div

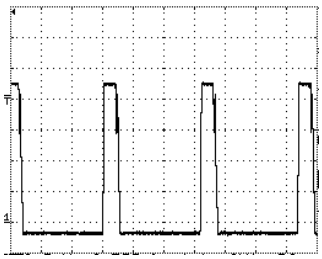

⑩ 2.0V 20µs/div

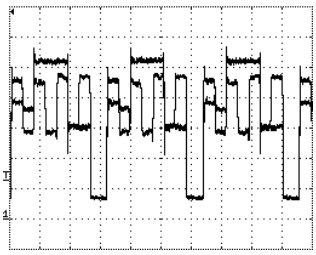

⑮ 1.0V 20µs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

DEFLECTION

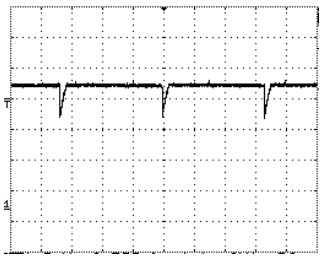

⑯ 1.0V 5ms/div

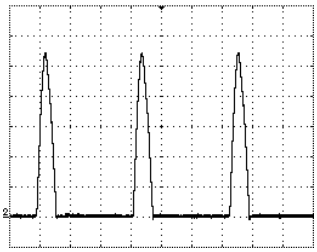

㉑ 200V 20µs/div

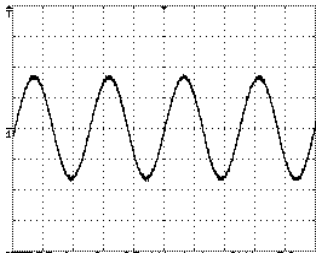

㉖ 500mV 1ms/div

SOUND

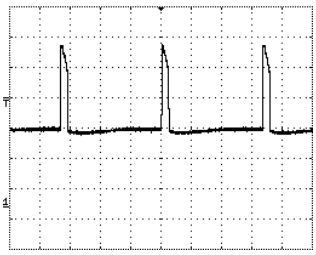

⑰ 10V 5ms/div

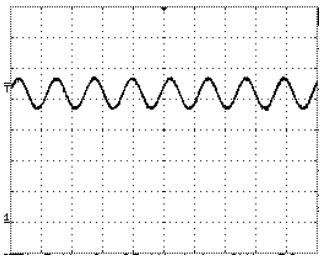

㉒ 1.0V 2ms/div

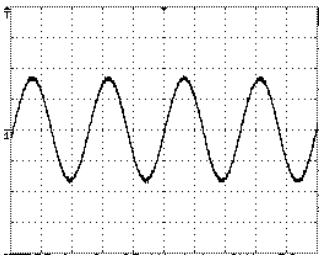

㉗ 500mV 1ms/div

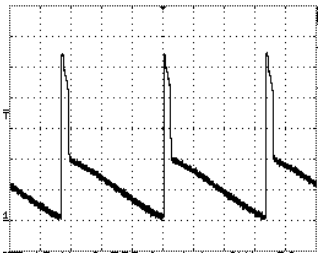

⑱ 10V 5ms/div

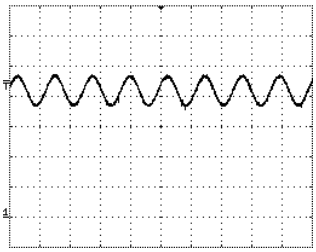

㉓ 1.0V 2ms/div

AV

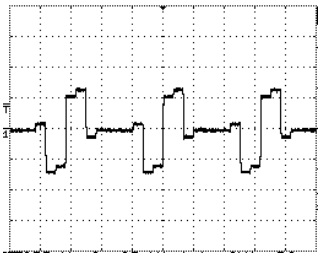

㉘ 200mV 20µs/div

⑲ 50V 20µs/div

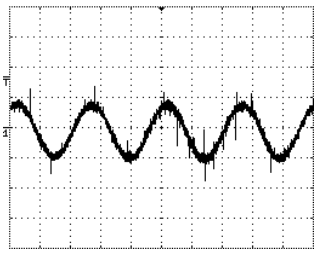

㉔ 20mV 1ms/div

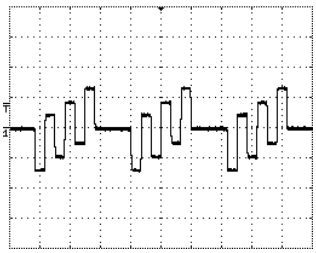

㉙ 200mV 20µs/div

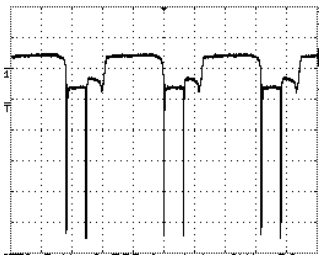

⑳ 2.0V 20µs/div

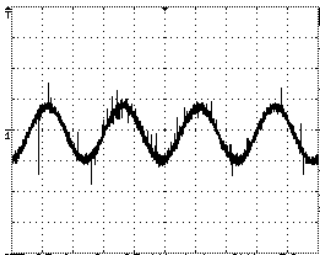

㉕ 20mV 1ms/div

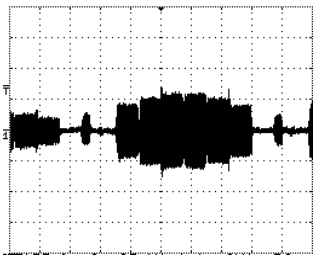

㉚ 100mV 10µs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

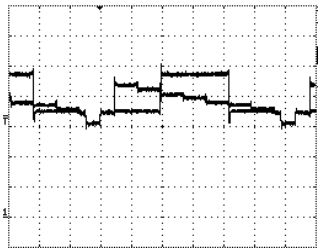

(31) 500mV 10µs/div

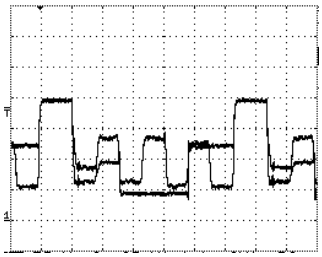

(38) 50V 10µs/div

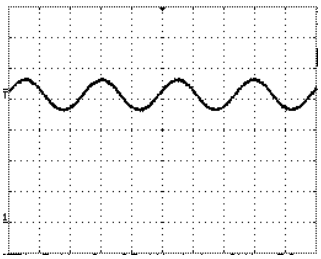

(32) 1.0V 1ms/div

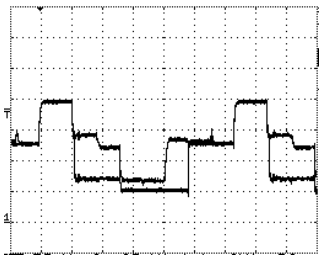

(39) 50V 10µs/div

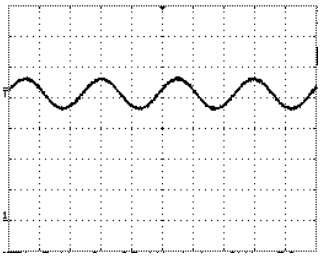

(33) 1.0V 1ms/div

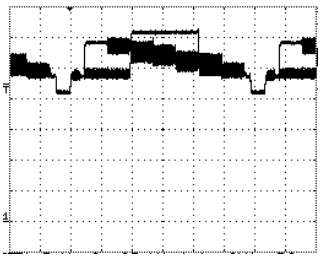

(34) 1.0V 10µs/div

CRT

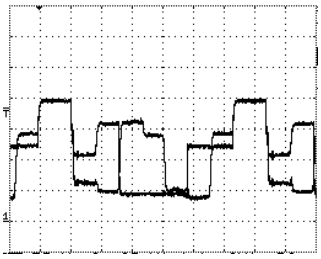

(37) 50V 10µs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

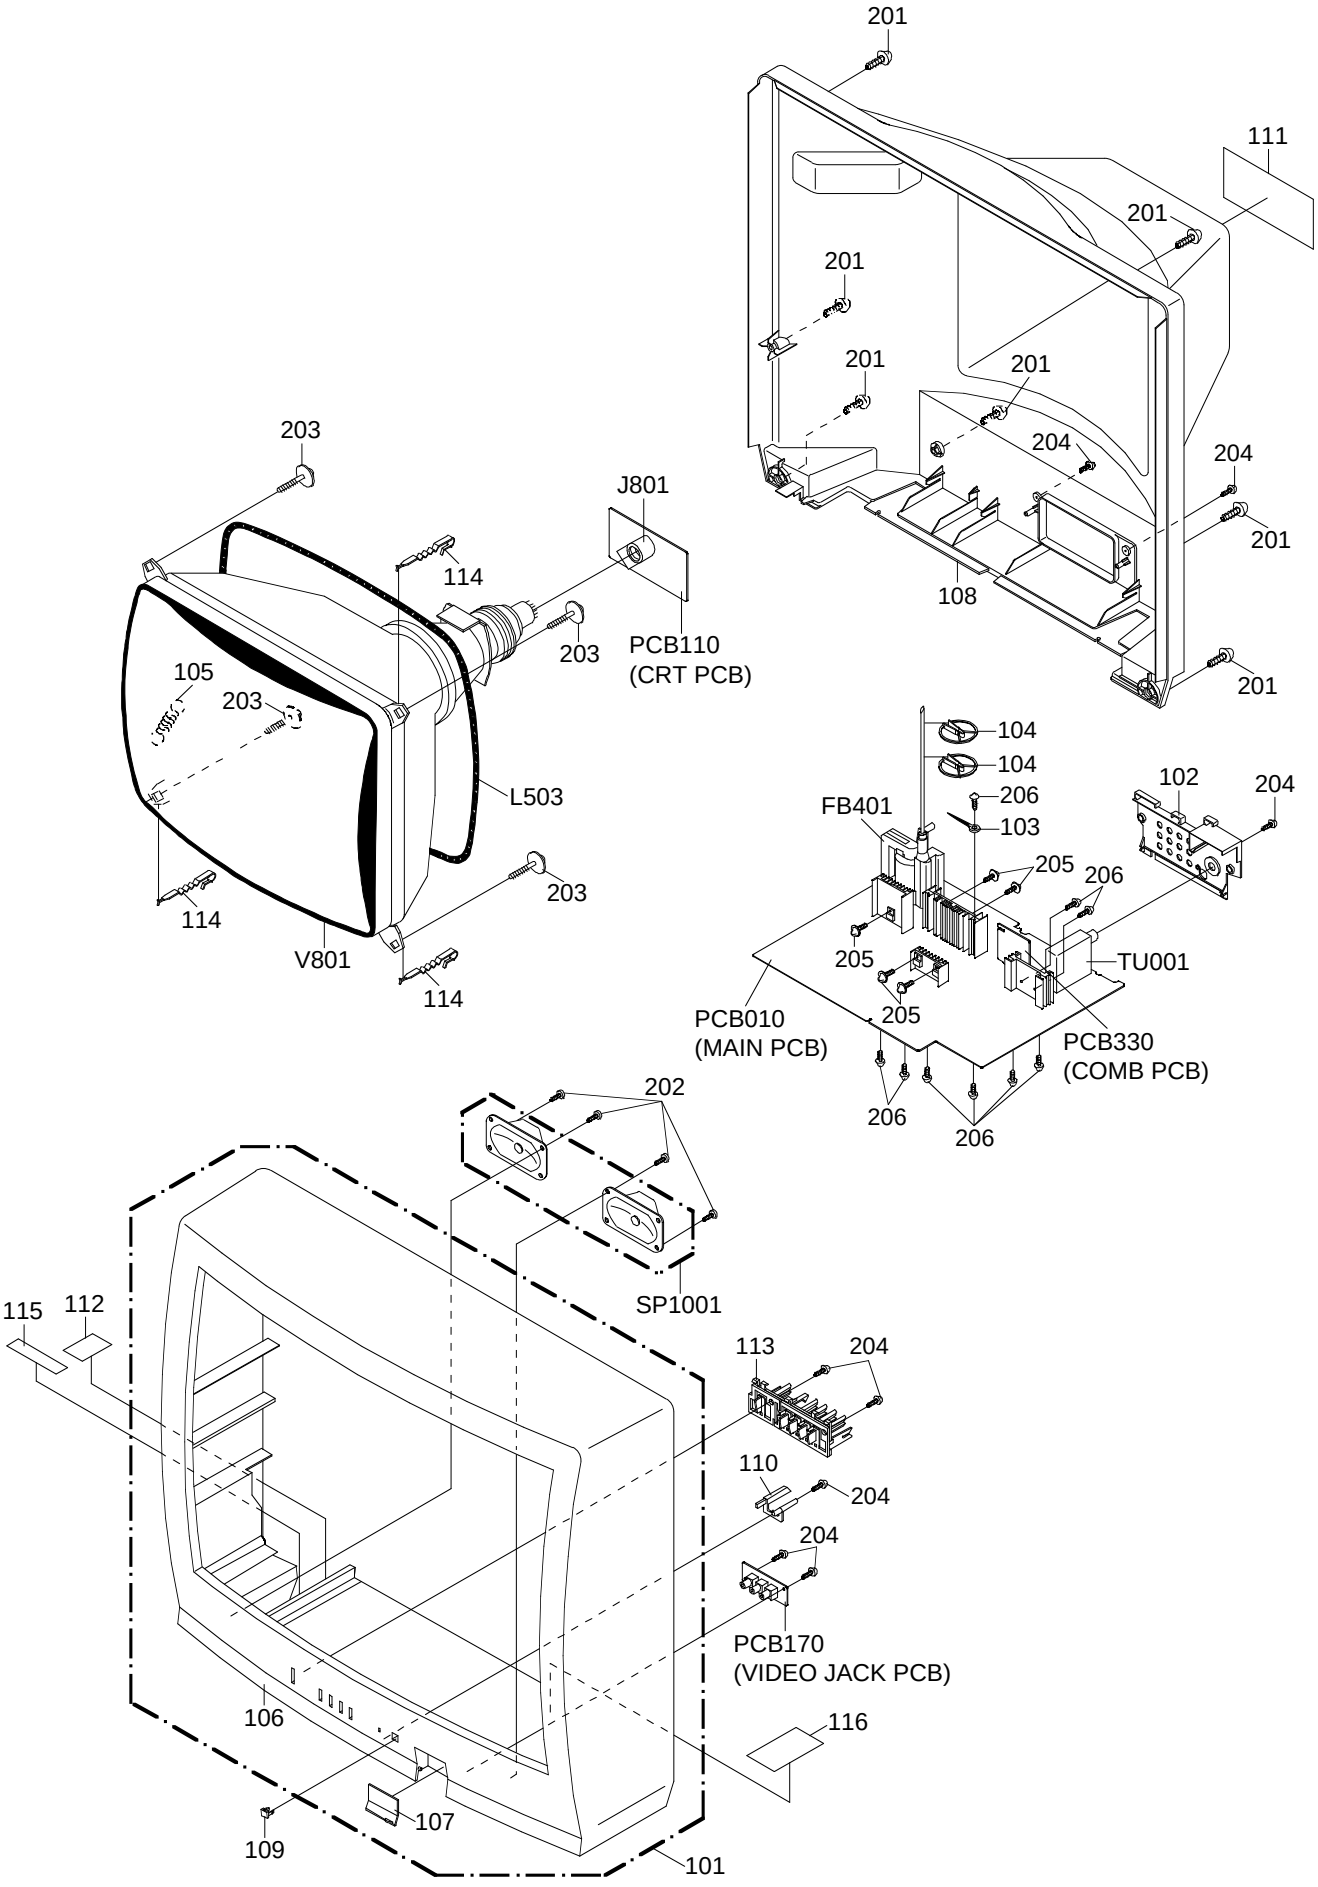

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AD300828	A3K109E720	CABINET,FRONT ASSY	
102	AD300757	771WPA0263	PLATE,JACK	
103	AD300758	899EFBA001	WIRING CLIP	
104	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
105	AD300759	741WUA0021	SPRING,EARTH	
106	AD300760	701APJ0082	CABINET,FRONT	
107	AD300761	712APB0001	DOOR	
108	AD300762	702APA0128	CABINET,BACK	
109	AD300763	711WPA0149	PLATE,FRONT	
110	AD300764	713WPA0163	GLASS,LED	
111	AD300829	7225490055	SHEET,RATING	
112	AD300830	7230006856	SHEET,CAUTION	
113	AD300767	735WPB0134	BUTTON ASS'Y	
114	AD300768	762WPA0009	HOLDER,CRT WIRE	
115	AD300831	7220001109	SHEET,HWC	
116	AD300832	7240001041	SHEET,CSA WARNING	
201	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
202	AD300769	8117330A04	SCREW,TAPPING(B0) FLAT	3x10
203	BZ710033	8111J50D05	SCREW,TAPPING(A) GW22	5x35
204	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
205	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
206	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
---	AD300770	791AHA0024	FILM,BAG	
---	AD300771	792AHA0085	PACKAGE,TOP	
---	AD300772	792AHA0086	PACKAGE,BOTTOM	
---	AD300773	793ACD0500	GIFT BOX	
---	AD300833	A3K109E975	INSTRUCTION BOOK KIT	
---	AD300834	J3K10815	SERVICE STATION LIST	
---	AD300835	J3K10816	IMPORTANT SAFETY INSTRACTIONS	
---	AD300836	J3K10817	REGISTRATION CARD	
---	AD300837	J3K10825	ENVELOPE	
---	AD300838	J3K10901	INSTRUCTION BOOK	
---	AD300839	JA4LD500	POLY BAG	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	USA-TOSHIBA	Reference No.		Description
		RESISTORS		
⚠R416	AD300416	R002T25R6J	RC	5.6 OHM 1/2W
⚠R418	BZ210105	R4X5T6183F	R,METAL	18K OHM 1/6W
⚠R420	BZ210053	R002T22R2J	RC	2.2 OHM 1/2W
⚠R422	BZ210013	R4X5T4104F	R,METAL	100K OHM 1/4W
⚠R426	BZ210105	R4X5T6183F	R,METAL	18K OHM 1/6W
⚠R435	AD300655	R903N8222J	RC	2.2K OHM 1/8W
⚠R436	BZ210090	R4X5T6822F	R,METAL	8.2K OHM 1/6W
⚠R438	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W
⚠R439	AD300043	R3X181102J	R,METAL OXIDE	1K OHM 1W
⚠R441	AD300036	R4X5T6562F	R,METAL	5.6K OHM 1/6W
⚠R500	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W
⚠R501	AD300720	R5X2AE1R2J	R,CEMENT	1.2 OHM 7W
⚠R505	AD300038	R3X20B473J	R,METAL	47K OHM 3W
⚠R517	AD300042	R3X18A010J	R,METAL OXIDE	1 OHM 2W
⚠R521	AD300041	R3X18A270J	R,METAL OXIDE	27 OHM 2W
⚠R522	AD300041	R3X18A270J	R,METAL OXIDE	27 OHM 2W
⚠R527	BZ210149	R3X18AR68J	R,METAL OXIDE	0.68 OHM 2W
⚠R542	AD300721	R3X281R15J	R,METAL	0.15 OHM 1W
⚠R543	BZ210064	R63584681J	R,FUSE	680 OHM 1/4W
⚠R554	AD300722	R002T2273J	RC	27K OHM 1/2W
⚠R804	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R806	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R808	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
		CAPACITORS		
⚠C408	BZ110101	E5EZF3222M	CE	2200 UF 25V
⚠C413	AD300067	E02LF4102M	CE	1000 UF 35V
C418	BZ110056	P447F2474J	CMPP	0.47 UF 200V FHS
⚠C420	AD300723	P4N8FJ153H	CMPP	0.015 UF 1.25KV
⚠C421	BZ110125	C0JLYR7Q2K	CC	470 PF 2KV YR
⚠C423	BZ110125	C0JLYR7Q2K	CC	470 PF 2KV YR
C425	AD300077	C0JLYR713K	CC	0.001 UF 2KV YR
⚠C426	AD300061	E5EZFD220M	CE	22 UF 250V
⚠C430	AD300064	E02LT8220M	CE	22 UF 100V
⚠C501	AD300067	E02LF4102M	CE	1000 UF 35V
⚠C502	AD300078	C0JBB0713K	CC	0.001 UF 2KV B
⚠C503	AD300078	C0JBB0713K	CC	0.001 UF 2KV B
⚠C504	BZ110074	E50HU5010M	CE	1 UF 50V
⚠C505	BZ110145	P2472B104M	CMP	0.1 UF 275V PHE840
⚠C506	BZ110145	P2472B104M	CMP	0.1 UF 275V PHE840
⚠C507	BZ110012	E51CGC471M	CE	470 UF 200V
⚠C508	AD300726	CB3LB0MQ2K	CC	470 PF 250V
⚠C510	BZ110018	E5EZT4101M	CE	100 UF 35V
⚠C513	AD300726	CB3LB0MQ2K	CC	470 PF 250V
C517	BZ110115	C0JLYR7H3K	CC	0.0022UF 2KV YR
⚠C519	AD300726	CB3LB0MQ2K	CC	470 PF 250V
⚠C521	AD300060	E62NFB101M	CE	100 UF 160V
⚠C522	AD300727	CB3LE0ML3M	CC	0.0033UF 250V
⚠C523	AD300060	E62NFB101M	CE	100 UF 160V
⚠C527	BZ110119	E02LF2222M	CE	2200 UF 16V
⚠C531	BZ110081	E02LT2471M	CE	470 UF 16V
⚠C534	BZ110152	C0JLYR7B3K	CC	0.0012UF 2KV YR
C535	BZ110115	C0JLYR7H3K	CC	0.0022UF 2KV YR
⚠C542	AD300728	E02LF5471M	CE	470 UF 50V
C808	AD300078	C0JBB0713K	CC	0.001 UF 2KV B
C1003	AD300067	E02LF4102M	CE	1000 UF 35V
C1004	BZ110053	E02LF3102M	CE	1000 UF 25V
C1009	BZ110053	E02LF3102M	CE	1000 UF 25V
		DIODES		
D001	AD300729	D97U03301A	DIODE,ZENER	MTZJ33A T-77
D101	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
D102	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D103	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D106	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D107	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D108	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D109	BZ410054	0021721150	LED	SLR-342VCT32
D110	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D111	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D201	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
⚠D401	AD300069	D97U02701B	DIODE,ZENER	MTZJ27B T-77
D402	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D403	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D404	BZ410023	D97U09R11B	DIODE,ZENER	MTZJ9.1B T-77
⚠D405	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
⚠D406	AD300071	D97U01101B	DIODE,ZENER	MTZJ11B T-77
⚠D407	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D410	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	USA-TOSHIBA	Reference No.	Description	
		DIODES		
⚠D411	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
⚠D501	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D502	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D503	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D504	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D505	BZ410052	D28F21DQN9	DIODE,SCHOTTKY	21DQ09N-FC4
⚠D506	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D507	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D508	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D509	AD300075	D28TELS6N6	DIODE,RECTIFER	10ELS6N-TA1B2
⚠D510	AD300076	D28F30DF60	DIODE,RECTIFER	30DF6-FC
⚠D511	AD300731	D2WXN49370	DIODE,SILICON	1N4937
⚠D512	BZ410076	D2WXB290S0	DIODE,SILICON	SB290S
D513	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
⚠D514	BZ410076	D2WXB290S0	DIODE,SILICON	SB290S
D515	AD300732	D28XQS04N0	DIODE,SCHOTTKY	11EQS04N-TA2B5
D516	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D517	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D518	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D519	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D520	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D521	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D527	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D528	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
⚠D529	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D530	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D531	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D601	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D602	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D603	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D604	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D605	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D608	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D611	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D612	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D613	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D614	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D615	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D711	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D807	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D808	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D809	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
		ICS		
IC101	AD300051	I56D07054A	IC	OEC7054A
IC103	AD300050	I9UJ0T600C	IC	PST600C
IC199	AD300825	A3K109E015	IC	S-24C08ADPA-01
IC201	AD300058	I05DC12530	IC	TB1253N
IC303	BZ611034	I06DF62420	IC	M62420SP
⚠IC401	AD300414	I03TD80410	IC	LA78041
⚠IC501	BZ611036	I2BT06624G	IC	STR-G6624
⚠IC502	BZ611033	I1KA97809A	IC	KIA7809API
⚠IC503	BZ611015	I1KA97805A	IC	KIA7805API
⚠IC504	BZ410040	0002500560	PHOTO COUPLER	TLP621(D4-GR-LF2)
IC701	AD300054	I0UD013110	IC	MM1311AD
IC902	AD300059	I01FF58290	IC	AN5829S
⚠IC1001	AD300056	I0FSP52760	IC	AN5276
IC1501	AD300609	I05FE90A45	IC	TC90A45F
		TRANSISTORS		
Q101	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q102	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q103	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102RTK
Q107	BZ510068	TNAAJ05003	COMPOUND TRANSISTOR	KRC111RTK
Q109	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q201	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q202	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q203	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q204	AD300734	T8AA03881S	TRANSISTOR,SILICON	KTC3881S-RTK
⚠Q402	BZ510027	TC3Q026210	TRANSISTOR,SILICON	2SC2621(D,E)-RAC
⚠Q405	BZ510040	TDUU024990	TRANSISTOR,SILICON	2SD2499(LB0EC1)
Q406	BZ510049	TPYJD05001	COMPOUND TRANSISTOR	DTA144EKAT146
⚠Q501	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
⚠Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
⚠Q508	AD300611	TAAT01273Y	TRANSISTOR,SILICON	KTA1273_Y

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	USA-TOSHIBA	Reference No.	Description	
		TRANSISTORS		
Q509	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102RTK
⚠Q510	BZ510031	TD3T007340	TRANSISTOR,SILICON	2SD734(E,F)-AA
⚠Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q601	BZ510020	TNYJB05001	COMPOUMD TRANSISTOR	DTC114EKAT146
Q603	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q604	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q701	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q704	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q705	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q709	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
⚠Q801	BZ510027	TC3Q026210	TRANSISTOR,SILICON	2SC2621(D,E)-RAC
⚠Q802	BZ510027	TC3Q026210	TRANSISTOR,SILICON	2SC2621(D,E)-RAC
⚠Q803	BZ510027	TC3Q026210	TRANSISTOR,SILICON	2SC2621(D,E)-RAC
⚠Q810	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP(R,S) TP
⚠Q811	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP(R,S) TP
⚠Q812	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP(R,S) TP
Q1001	BZ510068	TNAAJ05003	COMPOUND TRANSISTOR	KRC111RTK
Q1501	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q1502	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q1503	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q1504	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
		COILS &TRANSFORMERS		
L002	BZ310002	021673101K	COIL	100 UH
L101	AD300121	021LA62R7K	COIL	2.7 UH
L202	BZ310101	0216A61R2K	COIL	1.2 UH
L203	BZ310101	0216A61R2K	COIL	1.2 UH
L204	BZ310043	021LA6150K	COIL	15 UH
L205	BZ310003	021673470K	COIL	47 UH
L301	BZ310029	021LA6470K	COIL	47 UH
L302	BZ310058	021LA6220K	COIL	22 UH
⚠L402	BZ310063	022100027A	COIL,LINEARITY	ELH5L4113
⚠L501	AD300402	029X000098	COIL,LINE FILTER	SS28H-20075
⚠L503	AD300735	028R270008	COIL,DEGAUSS	8R270008
L601	BZ310003	021673470K	COIL	47 UH
L602	BZ310002	021673101K	COIL	100 UH
L603	BZ310040	02167F470J	COIL	47 UH
L604	BZ310040	02167F470J	COIL	47 UH
L701	BZ310005	02167D101K	COIL	100 UH
L703	BZ310040	02167F470J	COIL	47 UH
L802	AD300123	021673151K	COIL	150 UH
L803	AD300123	021673151K	COIL	150 UH
L804	AD300123	021673151K	COIL	150 UH
L901	BZ310058	021LA6220K	COIL	22 UH
L1501	BZ310052	021LA6100K	COIL	10 UH
L1502	BZ310043	021LA6150K	COIL	15 UH
L1503	AD300614	021673821K	COIL	820 UH
L1506	BZ310058	021LA6220K	COIL	22 UH
T401	AD300736	045013002J	TRANS,HORIZONTAL DRIVE	ZTS7196-3
⚠T501	AD300737	048140064S	TRANSFORMER,SWITCHING	8140064S
		JACKS		
J203	BZ614203	060Q431018	RCA JACK	AV3-19DS-1
J701	BZ614203	060Q431018	RCA JACK	AV3-19DS-1
J702	AD300108	063Q700002	JACK	YKF51-5503
J703	BZ614203	060Q431018	RCA JACK	AV3-19DS-1
J704	AD300738	060Q411017	RCA JACK	AV3-19D-5
J705	AD300739	060Q401048	RCA JACK	AV1-06D-3
J706	AD300740	060Q401049	RCA JACK	AV1-06D-4
J707	AD300741	060Q421018	RCA JACK	AV1-06DS-2
⚠J801	BZ614057	066C130015	SOCKET,CATHODE RAY TUBE	CVT3275-5102
		SWITCHES		
SW101	BZ612001	0504201T31	SWITCH,TACT	SKHVBED010
SW102	BZ612001	0504201T31	SWITCH,TACT	SKHVBED010
SW103	BZ612001	0504201T31	SWITCH,TACT	SKHVBED010
SW104	BZ612001	0504201T31	SWITCH,TACT	SKHVBED010
SW105	BZ612001	0504201T31	SWITCH,TACT	SKHVBED010
		VARIABLE RESISTORS		
VR401	BZ210194	V1263H3BT7	VOLUME,SEMI FIXED	RH0683CJ3R
VR502	BZ210067	V116314BTC	VOLUME,SEMI FIXED	EVNCYAA03B14
		P.C.BOARD ASSEMBLIES		
PCB010	AD300826	A3K109E010K	PCB ASS'Y	TMA509A
PCB110	AD300743	A3K106E110K	PCB ASS'Y	TCA367A
PCB170	AD300827	A3K109E170K	PCB ASS'Y	TEAA68A
PCB330	AD300745	A3K106E330K	PCB ASS'Y	TEAA70A
		MISCELLANEOUS		
B502	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B504	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B505	BZ310015	024AT03482	CORE,BEADS	BL02RN2-R62T4

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	USA-TOSHIBA	Reference No.	Description		
			MISCELLANEOUS		
⚠CD501	AD300746	120R615901	CORD,AC BUSH	0R615901	
CD702	AD300747	06CU252002	CORD,CONNECTOR	CU252002	
CD801	AD300748	06CU2A3401	CORD,CONNECTOR	CU2A3401	
CD803	BZ614175	06CU82039A	CORD,CONNECTOR	SM1098-009-1A	
CD805	BZ614175	06CU82039A	CORD,CONNECTOR	SM1098-009-1A	
CF201	BZ613015	1011T4R504	FILTER,CERAMIC	EFCT4R5YS5A	
CF202	BZ613022	1022T45R74	FILTER,SAW	SAF45MFG220Z	
CF203	AD300686	1012T4R519	FILTER,CERAMIC TRAP	TPSRA4M50C00-A0	
CF204	AD300513	1012T04702	FILTER,CERAMIC TRAP	MKT47.3MC110P-TF	
CP101	BZ614238	0697260650	CONNECTOR PCB SIDE	TKC-M06X-A1	
⚠CP401	AD300749	069W340018	CONNECTOR PCB SIDE	TS-80P-04-V1	
⚠CP501	BZ614176	069S320419	CONNECTOR PCB SIDE	A3963WV2-3PD	
⚠CP502	BZ614018	069W420029	CONNECTOR PCB SIDE	TV-50P-02-A1	
CP503	AD300751	069D010010	CONNECTOR PCB SIDE	005P-2100	
CP504	AD300751	069D010010	CONNECTOR PCB SIDE	005P-2100	
CP803	BZ614017	069W320018	CONNECTOR PCB SIDE	TS-80P-02-V1	
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100	
CP805	BZ614213	069S2A0629	CONNECTOR PCB SIDE	A2001WV2-10P	
CP806	BZ614017	069W320018	CONNECTOR PCB SIDE	TS-80P-02-V1	
CD701A	AD300622	06CH243001	CORD,CONNECTOR	CH243001	
CP1001	AD300097	069W14T299	CONNECTOR PCB SIDE	TID-X04P-Z1	
CP1501	AD300102	069J160260	CONNECTOR PCB SIDE	6035B-06Z002-T	
CP702A	AD300752	069S250629	CONNECTOR PCB SIDE	A2001WV2-5P	
CP702B	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P	
CP801A	BZ614273	067U010049	WIRE HOLDER	B2013H02-10P	
CUS011	BZ710279	800WFAA006	CUSHION A		or
	BZ710001	800WF00004	CUSHION-A		
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD	
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD	
⚠F501	BZ614125	081PC6R304	FUSE	51MS063LCC	
⚠FB401	AD300753	043227008R	TRANSFORMER,FLYBACK	3227008R	
FH501	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC	
FH502	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC	
OS101	BZ614171	077Q014003	REMOTE RECEIVER	PIC-28143SY-2	
⚠RY501	AD300114	0560V20115	RELAY	ALKS321	
⚠SP1001	AD300754	070Y435002	SPEAKER	070Y435002	
⚠TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A	
TM101	AD300091	07660DU010	TRANSMITTER	SBKMOP006A	
⚠TU001	AD300691	0145S00052	TUNER,VHF-UHF	ENV56D66G3	
⚠V801	AD300755	098T270601	CRT W/DY	A68AJB82X10	
X101	AD300624	1001T8R004	CERAMIC,OSCILLATOR	EFOEC8004T4	
X601	BZ613004	100CT3R505	CRYSTAL	HC-49/C	

RESISTOR

RC.....	CARBON RESISTOR

CAPACITORS

CC.....	CERAMIC CAPACITOR
CE.....	ALUMI ELECTROLYTIC CAPACITOR
CP.....	POLYESTER CAPACITOR
CPP.....	POLYPROPYLENE CAPACITOR
CPL.....	PLASTIC CAPACITOR
CMP.....	METAL POLYESTER CAPACITOR
CMPL.....	METAL PLASTIC CAPACITOR
CMPP.....	METAL POLYPROPYLENE CAPACITOR

TOSHIBA OF CANADA LTD.

HEAD OFFICE / 191 McNABB STREET MARKHAM,ONTARIO L3R 8H2,CANADA